


Abdeckkappe VAMC-L1-CD

FESTO

Festo SE & Co. KG

Postfach
73726 Esslingen
Deutschland
+49 711 347-0
www.festo.com

1. Teileliste

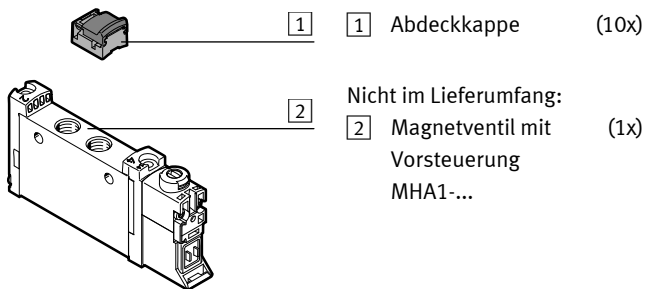

2. Bestimmungsgemäße Verwendung

Abdeckkappe:
Manuelle rastende Betätigung des Magnetventils 2.

3. Hinweise zur Montage

→ Hinweis

Funktionsstörung und Sachschaden durch unsachgemäße Montage.

- Druckluft vor Montagearbeiten abschalten.

- Handhilfsbetätigung (A) vor der Montage auf unbetätigt stellen.




→ Hinweis

Demontage der Abdeckkappe 1 nicht möglich.
Dies führt zur Beschädigung der Abdeckkappe 1.

- Sachgemäß montieren (→ Abschnitt 4).


4. Montage

4a. Montage allgemein

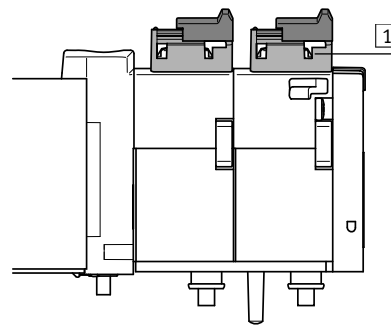


- Abdeckkappe 1 wie dargestellt montieren (→ Hinweis).

Ausnahme → Abschnitt 4b.

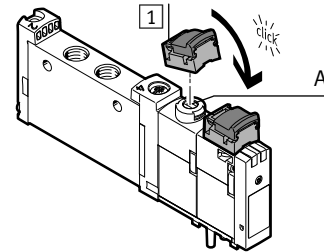


- Abdeckkappe 1 einseitig an die Nut der Handhilfsbetätigung (A) ansetzen.
- Abdeckkappe 1 kippen bis sie einrastet.

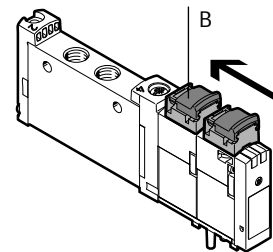


- Schieber (B) zur Betätigung in Pfeilrichtung bewegen.


4b. Montage mit einer Elektrik-Anschlussplatte VAVE-L1 ... -L3

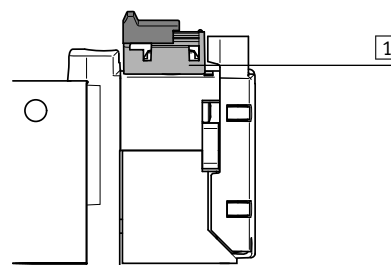


- Abdeckkappe 1 wie dargestellt montieren (→ Hinweis).

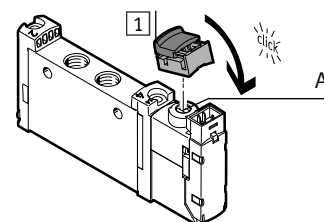

- Abdeckkappe 1 einseitig an die Nut der Handhilfsbetätigung (A) ansetzen.
- Abdeckkappe 1 kippen bis sie einrastet.

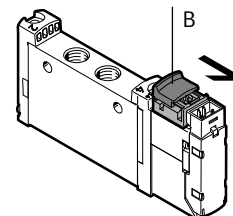

- Schieber (B) zur Betätigung in Pfeilrichtung bewegen.

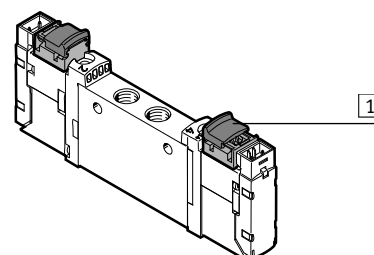

Bei 2 Magneten:

- Abdeckkappen 1 symmetrisch montieren.


Cover cap VAMC-L1-CD

FESTO

Festo SE & Co. KG

Postfach
73726 Esslingen
Germany
+49 711 347-0
www.festo.com

1. Parts list

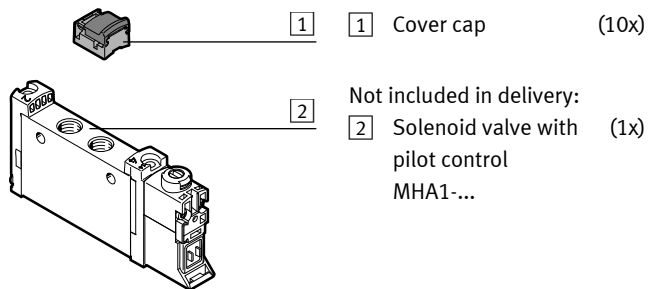

2. Intended use

Cover cap:
Manual detenting actuation of the solenoid valve 2.

3. Notes on assembly

→ Note

Malfunction and material damage due to incorrect assembly.

- Switch off compressed air before assembly work.
- Place manual override (A) onto unactuated prior to mounting.




→ Note

Dismounting the cover cap 1 is not possible.
This results in damage to the cover cap 1.

- Mount properly (→ section 4).


4. Assembly

4a. Assembly, general

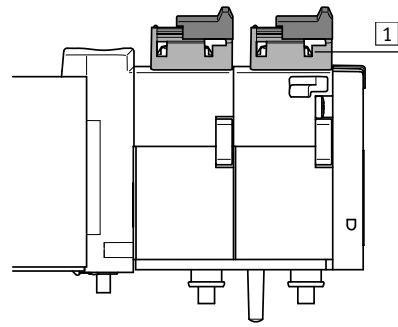


- Mount cover cap 1 as shown (→ Note).

Exception → section 4b.

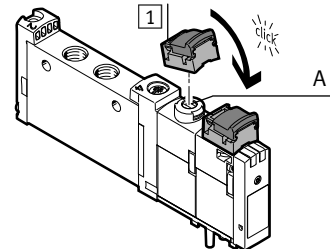


- Place cover cap 1 at one end onto the slot of the manual override (A).
- Tilt cover cap 1 until it catches.

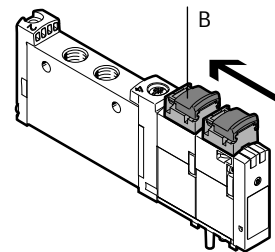


- To activate, move slide (B) in the direction of the arrow.


4b. Assembly with a connecting plate VAVE-L1 ... -L3

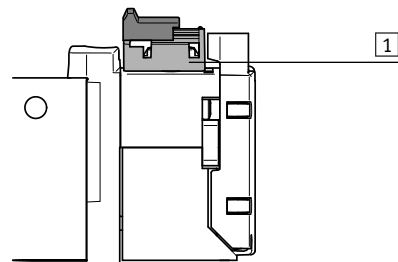


- Mount cover cap 1 as shown (→ Note).

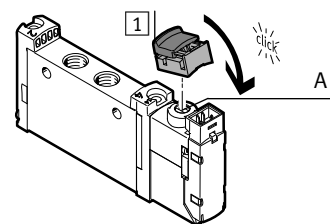

- Place cover cap 1 at one end onto the slot of the manual override (A).
- Tilt cover cap 1 until it catches.

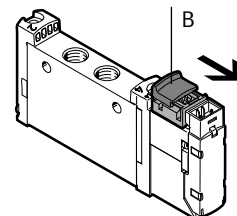

- To activate, move slide (B) in the direction of the arrow.

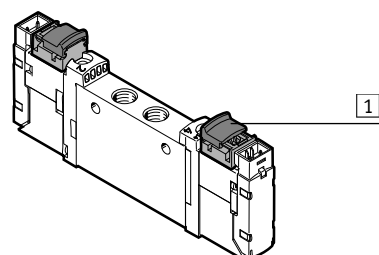

With 2 magnets:

- Mount cover cap 1 symmetrically.