

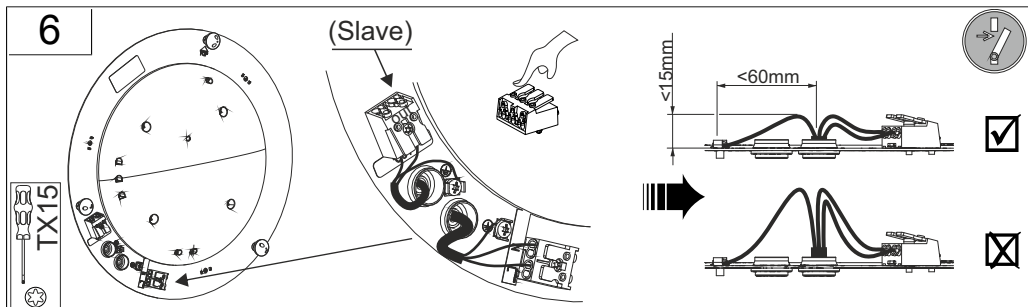
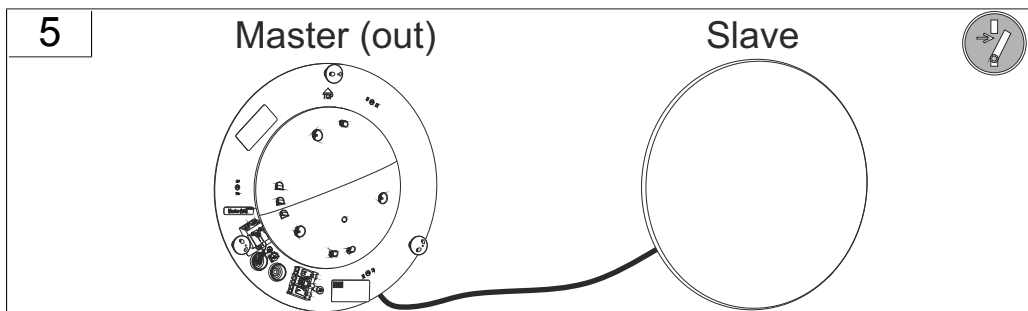
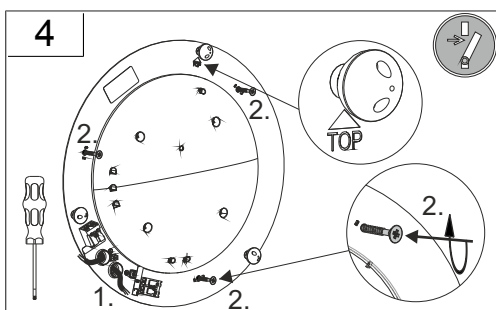
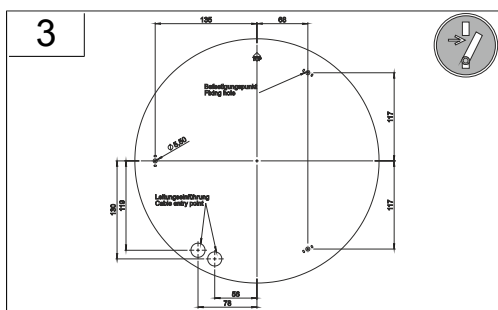


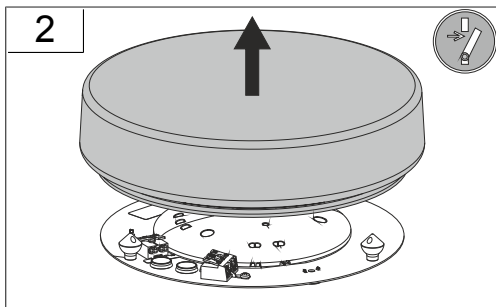


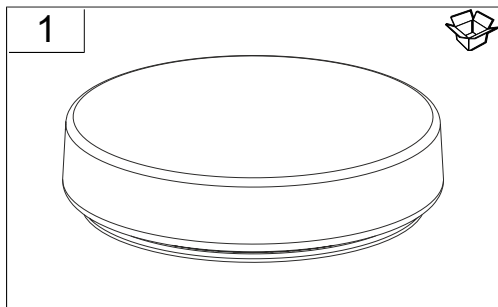


7

Master - Slave - System


radialer Bewegungsmelder/
radial motion sensor

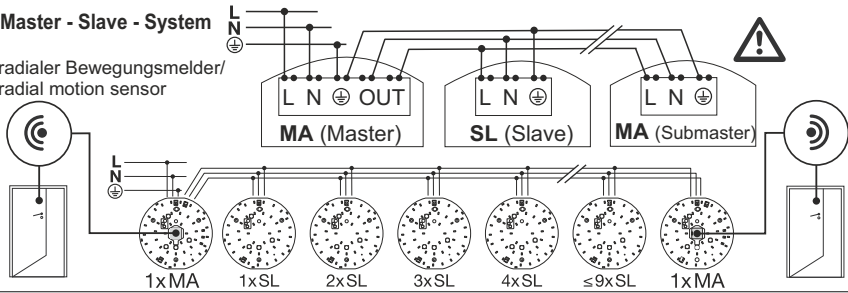


8

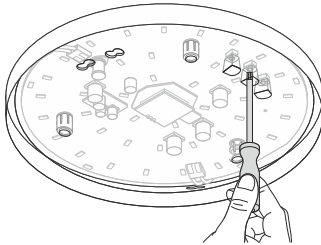


09-3003.052

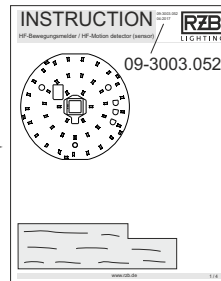

9

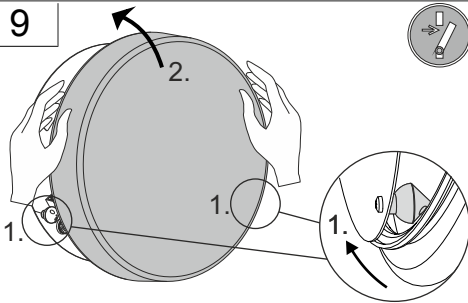

10

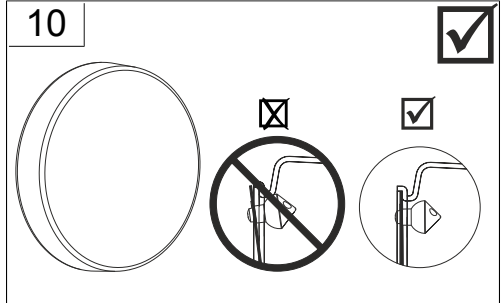




a

DIN 4844



Vor Wartung oder Reparatur freischalten/
power off before maintenance or repair

b

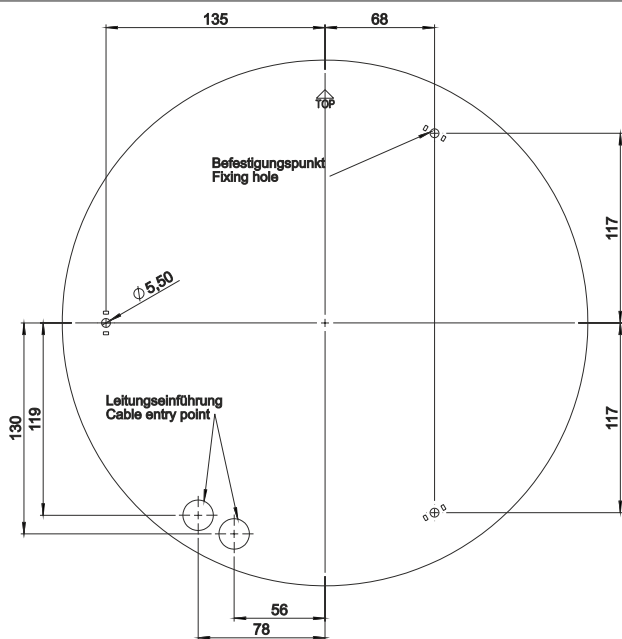



08-312085.012 Ersatzdiffusor PC D 360

270 g

Instruction:



41-2017



Instruction:



41-2017



Instruction:



41-2017

