


Sensorhalter SL-DSM-B

FESTO

Festo SE & Co. KG

Postfach
73726 Esslingen
++49/(0)711/347-0
www.festo.com

1. Teileliste

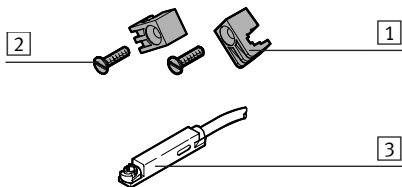

- 1** Sensorhalter (2x)
SL-DSM-B
- 2** Senkschraube (2x)
M2x8
- Nicht im Lieferumfang:
- 3** Näherungsschalter (2x)
SME/SMT-10F...

→ Hinweis

Eventuell sind die LED's am Näherungsschalter **3** nur teilweise sichtbar, auch bei richtiger Positionierung.




Vorsicht

Bei Zugbelastungen können die Leitungen brechen.

- Fixieren Sie die Leitungen der Näherungsschalter **3**.

2. Montage

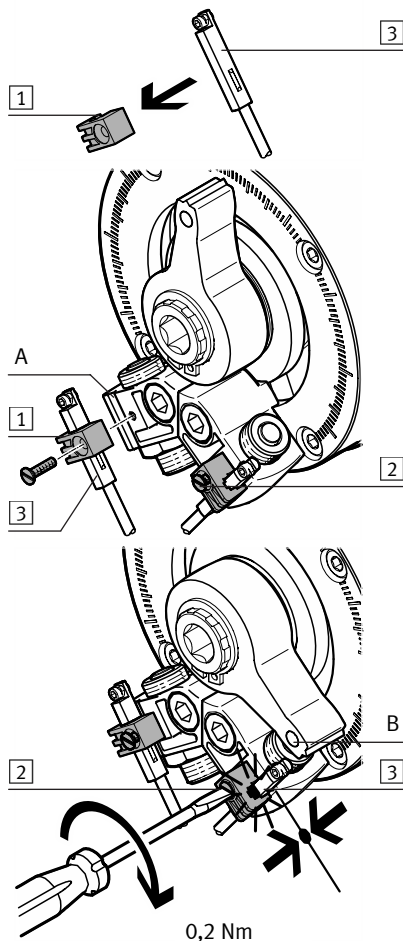

- Drücken Sie den Näherungsschalter **3** in die Aussparung des Sensorhalters **1**.
- Platzieren Sie den Sensorhalter **1** mit dem Näherungsschalter **3** auf dem Dämpferhalter, dass der Näherungsschalter **3** in der Führungsrille (A) liegt.
- Drehen Sie die Schrauben **2** nur so leicht ein, dass sich der Näherungsschalter **3** noch verschieben lässt.

Im Anschlaghebel befindet sich der Magnet (B) der zur Positionserkennung dient.

- Schließen Sie den Näherungsschalter **3** an.
- Positionieren Sie den Näherungsschalter **3** in der Führungsrille, dass er in der Endlage schaltet.

Um den Näherungsschalter **3** zu klemmen:

- Drehen Sie die Schraube **2** fest.


Sensor retainer SL-DSM-B

FESTO

Festo SE & Co. KG

Postfach
73726 Esslingen
++49/(0)711/347-0
www.festo.com

1. Parts list

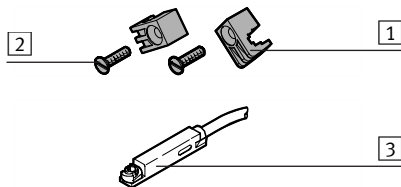

- 1** Sensor retainer (2x)
SL-DSM-B
- 2** Countersunk screw (2x)
M2x8
- Not included in scope of
delivery:
- 3** Proximity sensor (2x)
SME/SMT-10F-...

→ Note

The LEDs on the proximity sensor **3** may only be partly visible, even if positioned correctly.




Caution

The cables may break if overstressed.

- Fasten the cables of the proximity sensor **3**.

2. Assembly

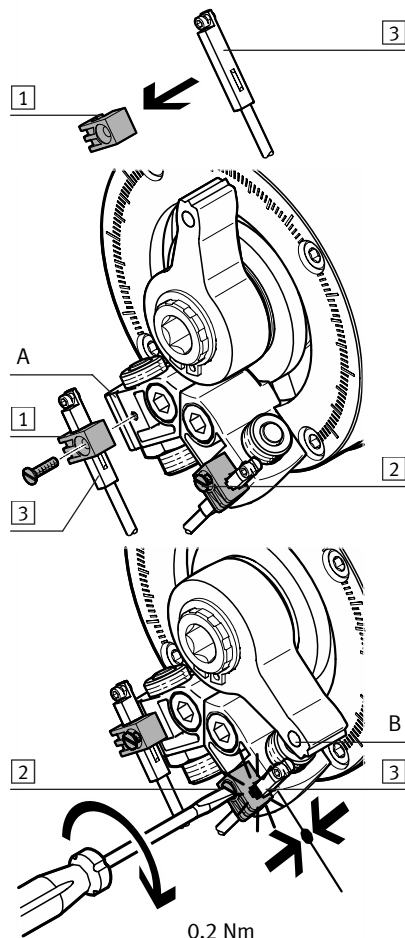

- Press the proximity sensors **3** into the groove in the sensor retainer **1**.
- Place the sensor retainer **1** with the proximity sensor **3** on the cushioning support so that the proximity sensor **3** lies in the guide ring (A).
- Tighten the screws **2** only slightly so that the proximity sensor **3** can still be shifted.

The magnet (B) which serves for position recognition is situated in the stop lever.

- Connect the proximity sensor **3**.
- Position the proximity sensor **3** in the guide ring so that it switches in the end position.

In order to clamp the proximity sensor **3**:

- Tighten the screw **2**.