

Stonetto

Mounting instructions

Shower tray made of DuraSolid Q

Stonetto

720145

720146

720147

720148

720149

720150

720166

720167

720168

720169

720170

720171



Important Information

4



Installation

6



Cleaning and Care

9



Important information

Regarding the mounting instructions

These mounting instructions comes as part of the Duravit bathtub and should be read carefully prior to installation.

Explanation of key words and symbols

Note! In the case of potential damage to property

Products are in compliance with following codes:

Uniform Plumbing Code

National Plumbing Code of America

International Plumbing Code

Products are in Compliance with the following standards

CSA B45.5-11/IAPMO Z124-2011



Link to **Installation information** in this section




Inspection (e.g. for scratches)



Indication of the length of time (e.g. 10 minutes)



Inspect to check for leaks and tightness



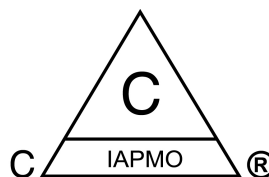



Target group and qualification

The shower tray must only be installed by **licensed plumber**.


Note!

Local installation regulations and county-specific standards must be observed at all times.

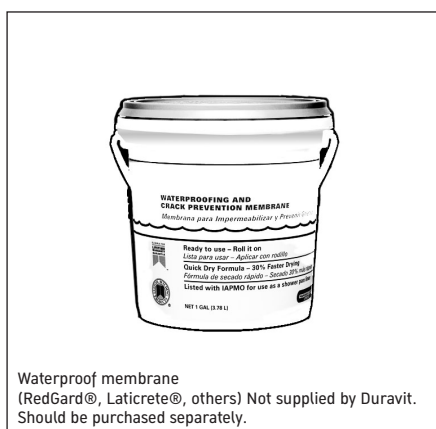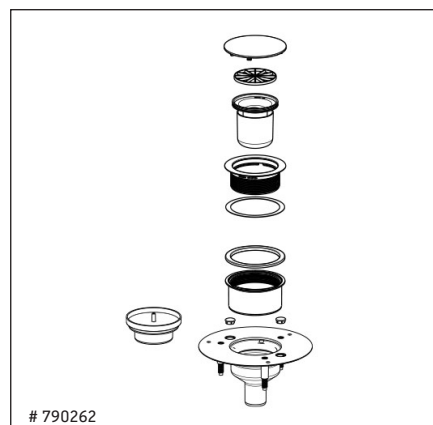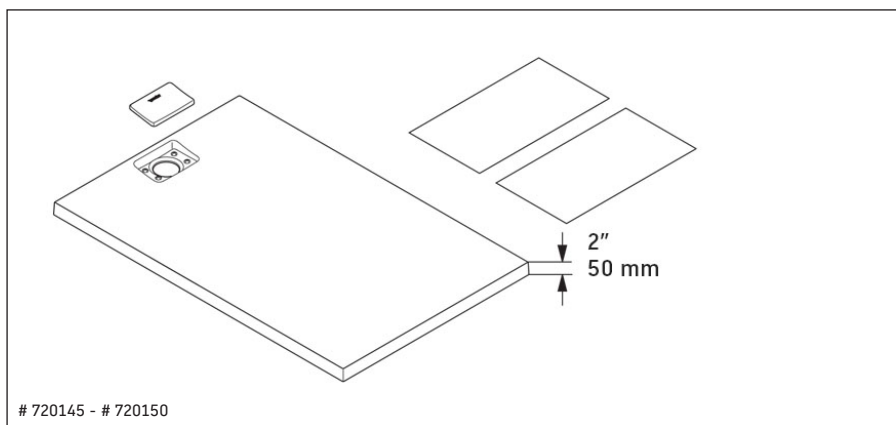


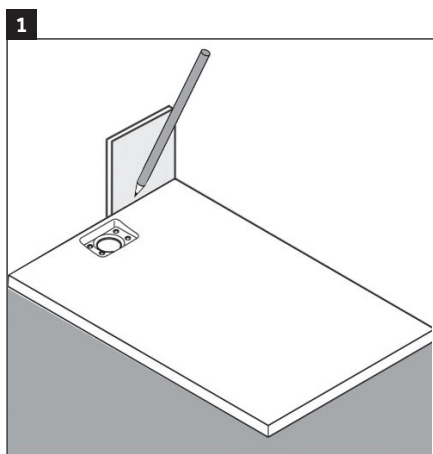


Mark the drain opening.

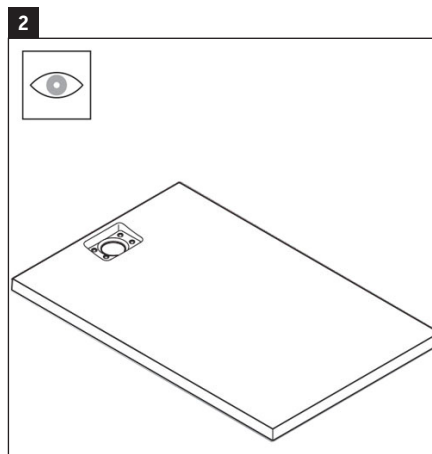


Inspect the shower tray for any damage that may have occurred during transport.

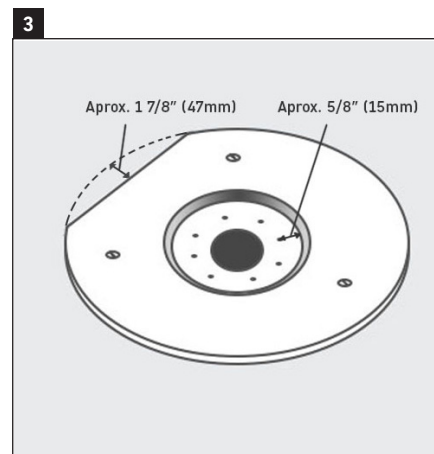


Cut drain flange about 1 7/8" to fit against the wall. And drill 8 pilot holes using 1/4" drill bit, about 5/8" inside from the edge.

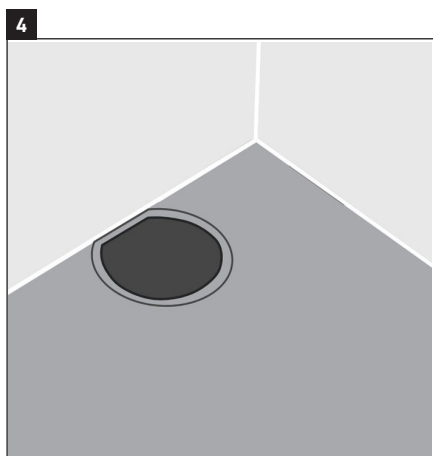


Cut opening for the drain flange.

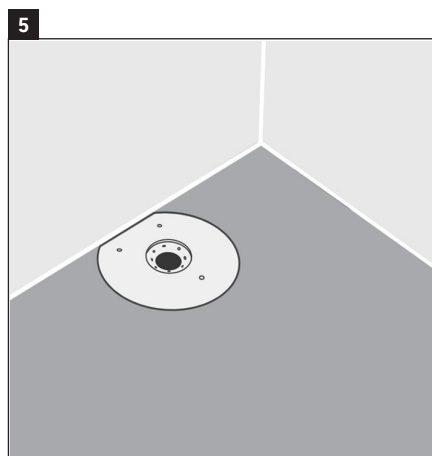


Place and secure drain flange to subfloor with screws. (Screws are not supplied)

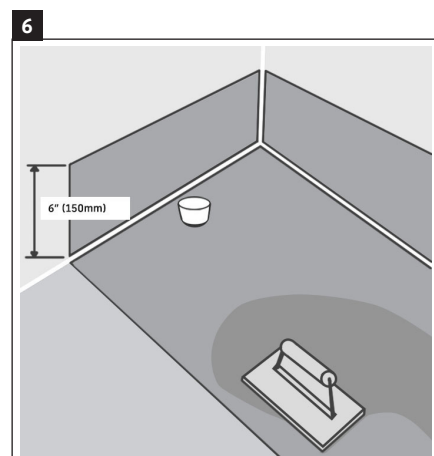


Put the plug in the drain. Apply first coat of paintable waterproof membrane. Apply membrane up the wall and in the corners, and make sure to thoroughly coat the entire drain flange. The membrane requires to be applied up the wall a minimum 6".

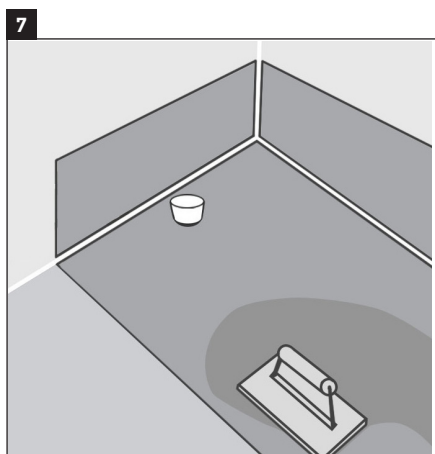


After first coat is dry, apply second coat.

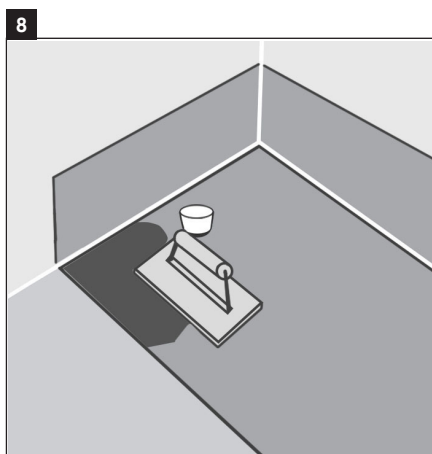


Make sure all corners and seams are thoroughly coated.

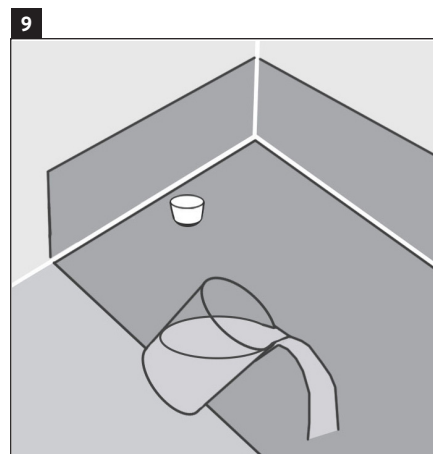


After appropriate setting time for membrane, water test.

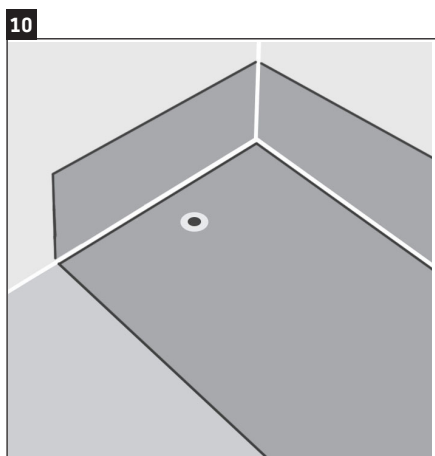


After water test, pull plug from the drain.
Confirm that the area under the shower tray is clear and dry.

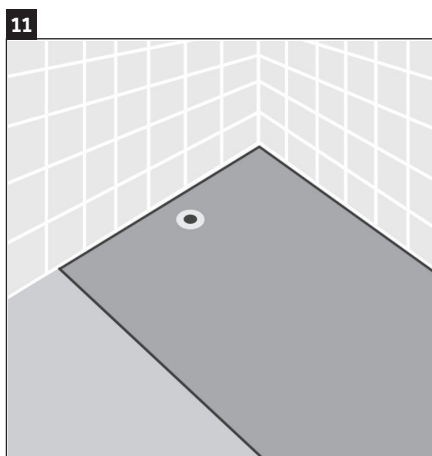


Install the wall tile.

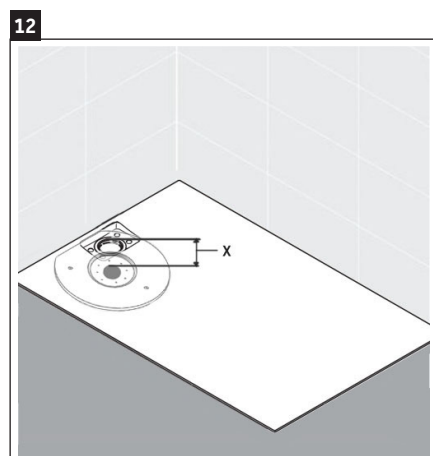


Measure distance X between top of the shower tray opening and the drain flange.

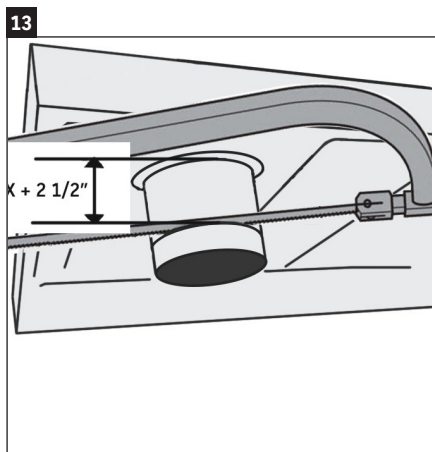


Cut the drain throat from shower tray, measurement X (step 12) plus 2 1/2".

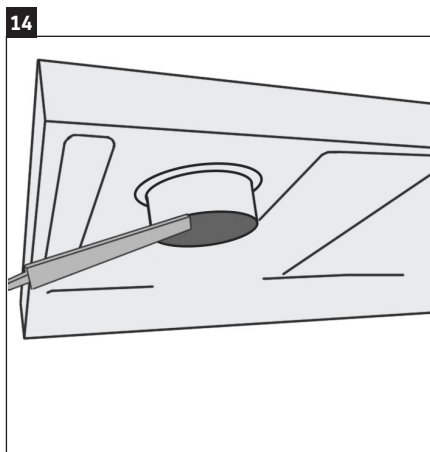


File down the cut edge of the drain throat.

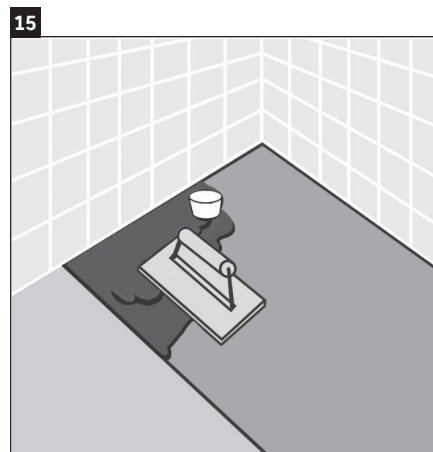


Apply mortar on the floor.

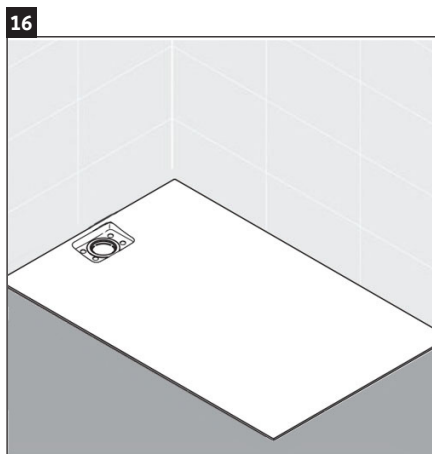

Place the shower tray in place.

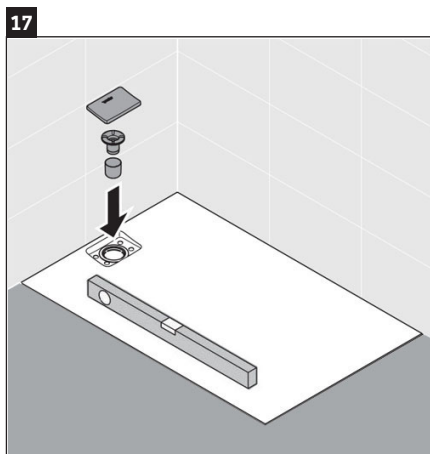

Check the leveling and install the drain.

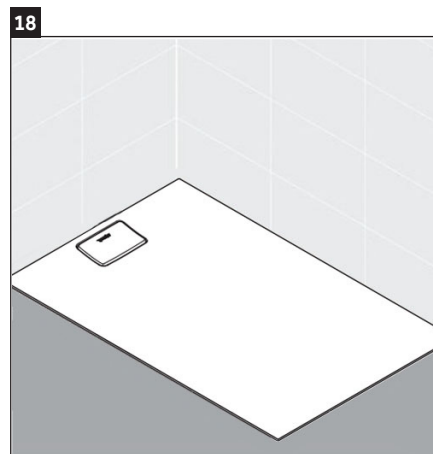

Install the cover.



Cleaning and Care

NOTICE

The surfaces may be damaged by using the wrong cleaning agents.

>Only use cleaning substances recommended by Duravit.

>Never use abrasive, aggressive or chemical cleaners.

Failure to observe these instructions may damage the surface. Complaints due to improper cleaning and care will not be covered by the warranty.

Cleaning

Daily cleaning

A soft, non-abrasive cloth and warm water can be used for daily cleaning, as well as for removing minor soiling. In the event of heavier soiling, washing-up liquid or a standard cleaning agent (e.g. acid-based or lemon cleaning agent) can be added to the water. After cleaning, rinse the area with water and dry with a soft cloth.

Cleaning agents containing abrasives (e.g. cream cleaner) must never be used. This can damage the surface of the bath or shower tray.

Stubborn dirt

To remove stubborn dirt, first wet a standard eraser sponge (dirt eraser). Add few drops of washing-up liquid and apply a gentle pressure to the dirt in a circular motion. After cleaning, rinse the area with water. Cleaning agents containing abrasives (e.g. cream cleaner) must never be used. This can damage the surface of the bath or shower tray.

Duravit NYC

105 Madison Avenue
New York, NY 10016
Toll Free 888-DURAVIT
Phone 212-686-0033
Fax 212-686-8033
info@us.duravit.com
www.duravit.nyc

Duravit USA, Inc.

2205 Northmont Pkwy., Ste. 200
Duluth, GA 30096
Toll Free 888-DURAVIT
Phone 770-931-3575
Fax 770-931-8454
info@us.duravit.com
www.duravit.us

