


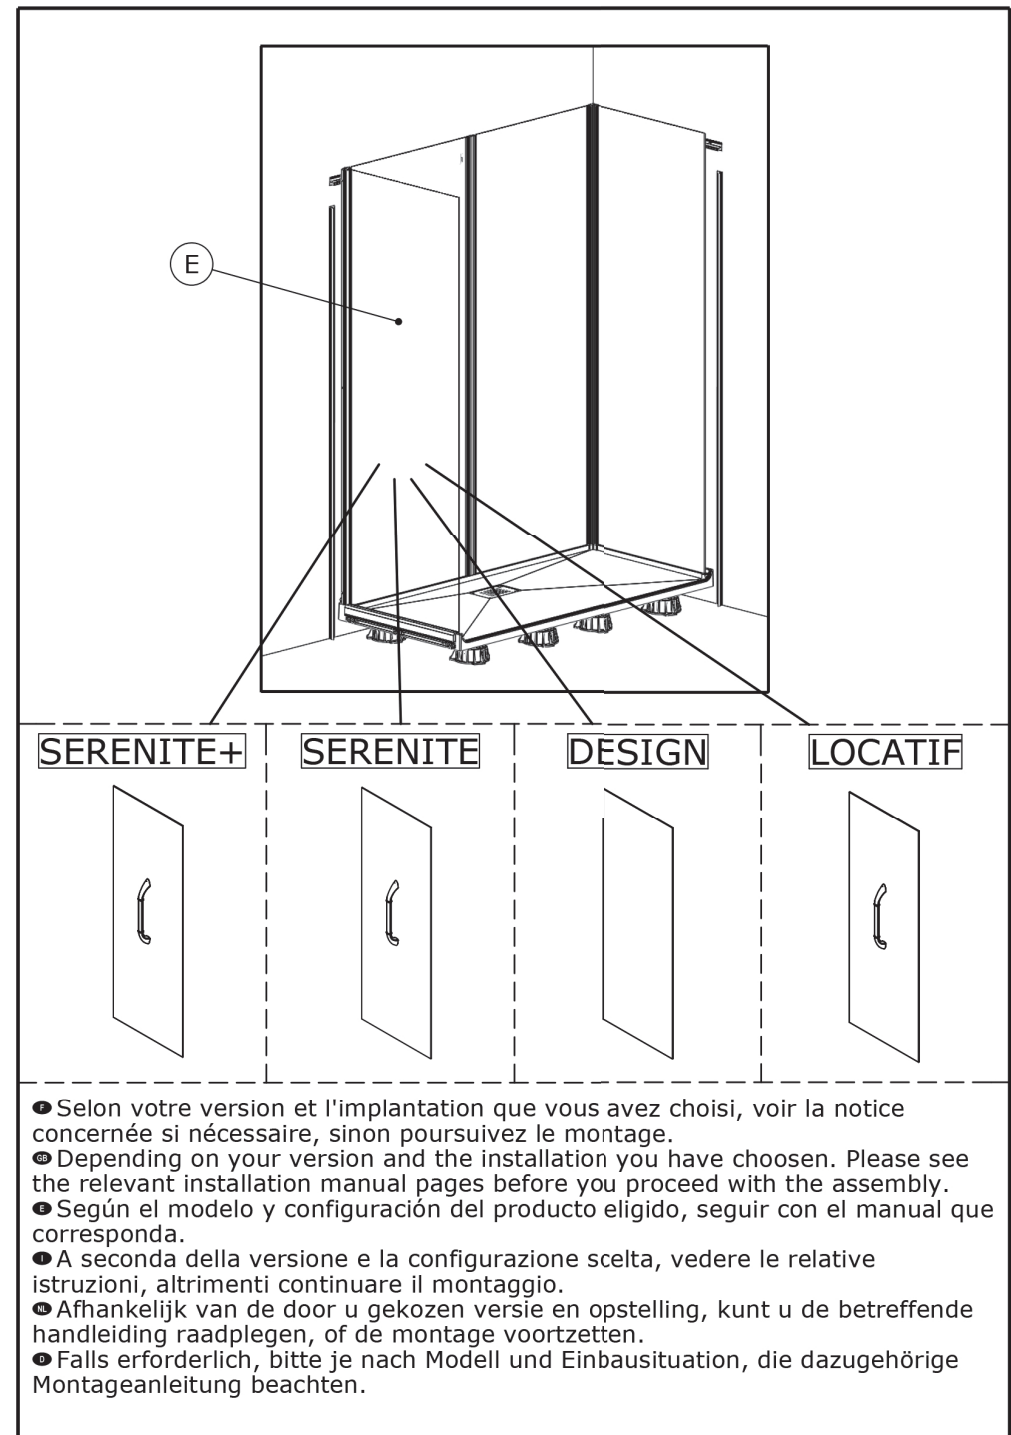
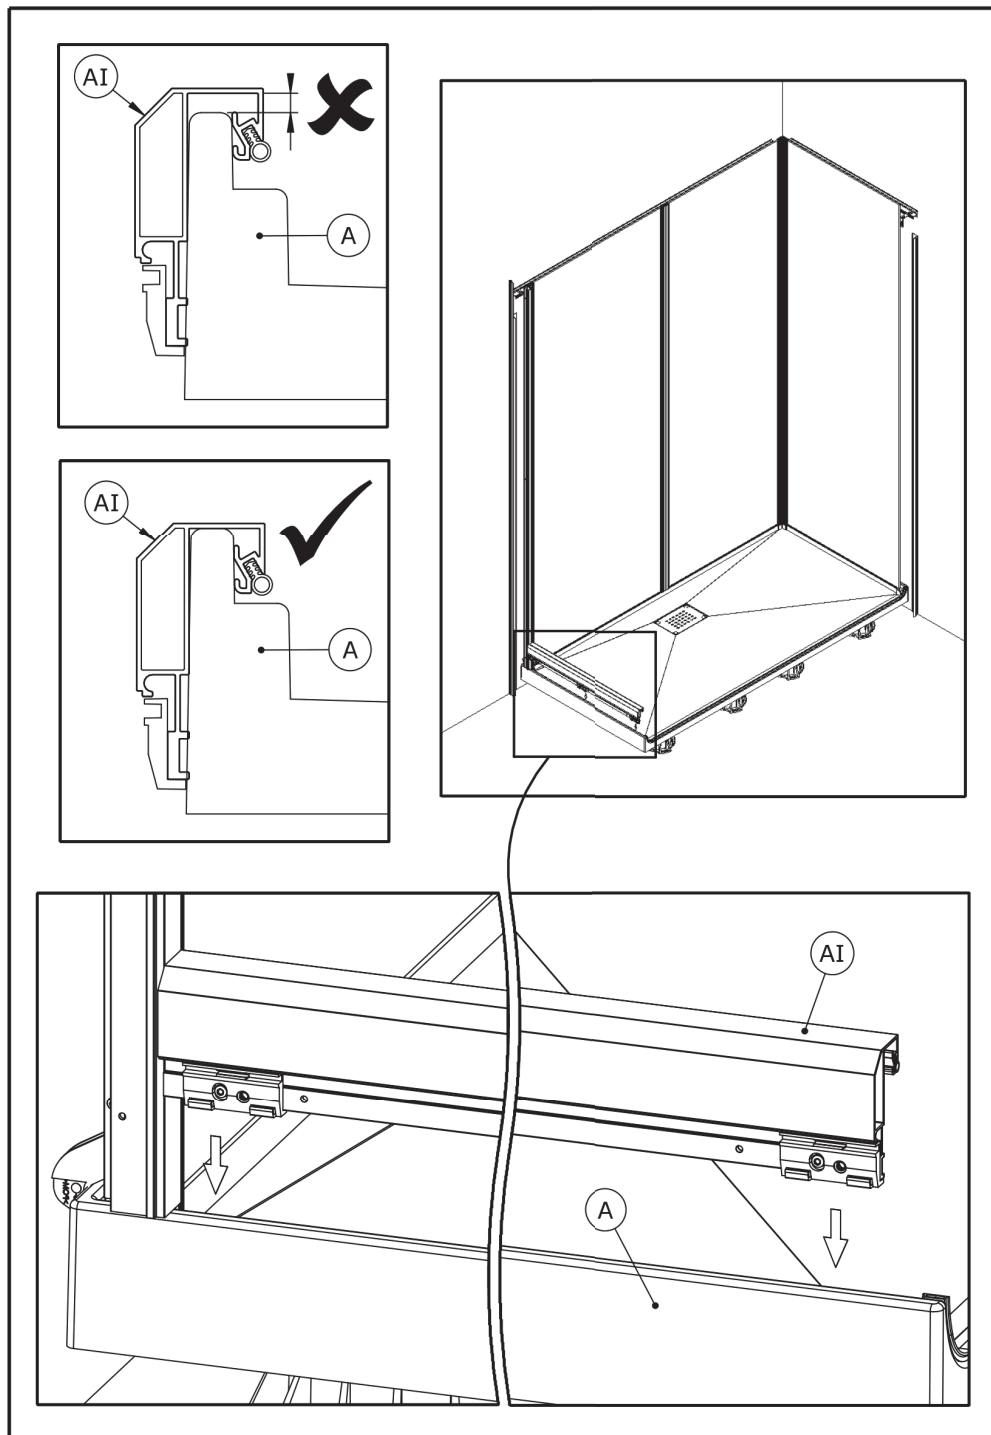


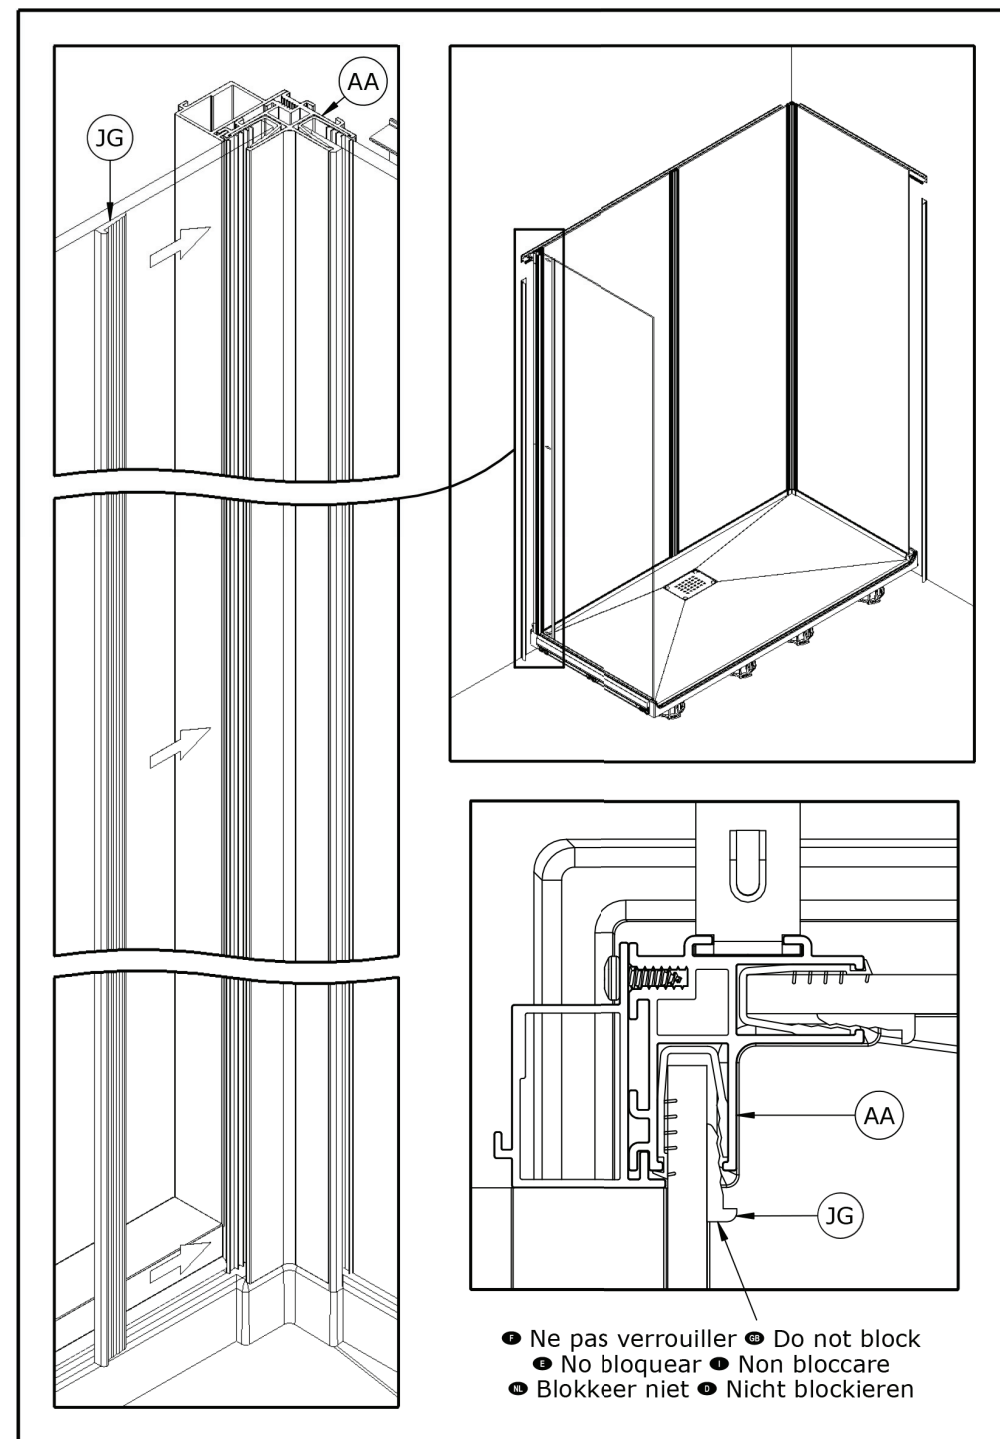


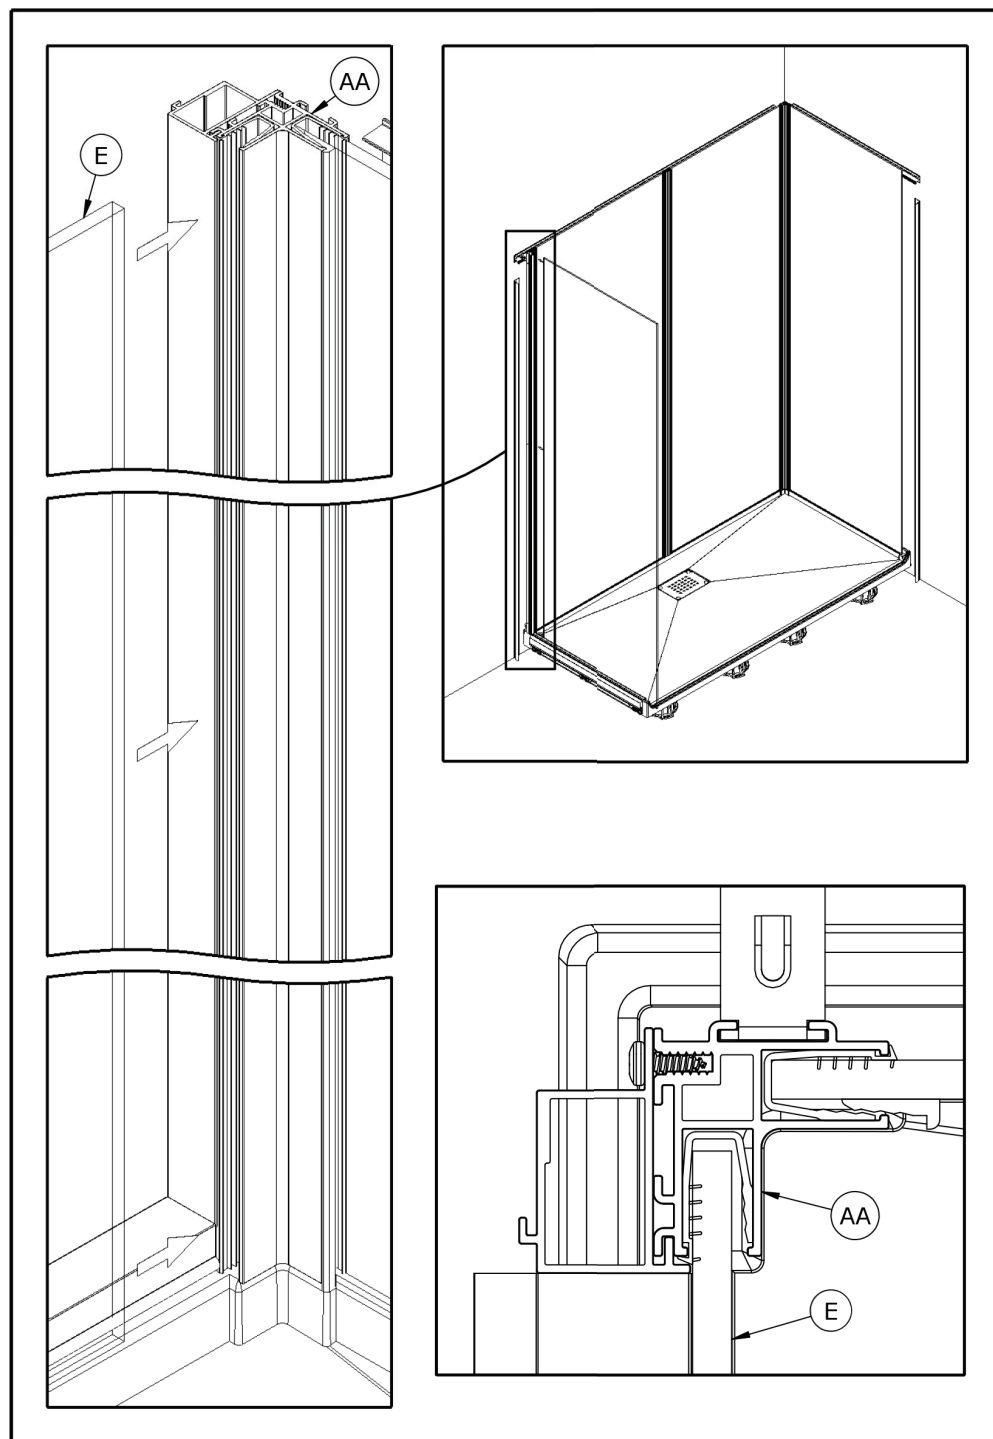

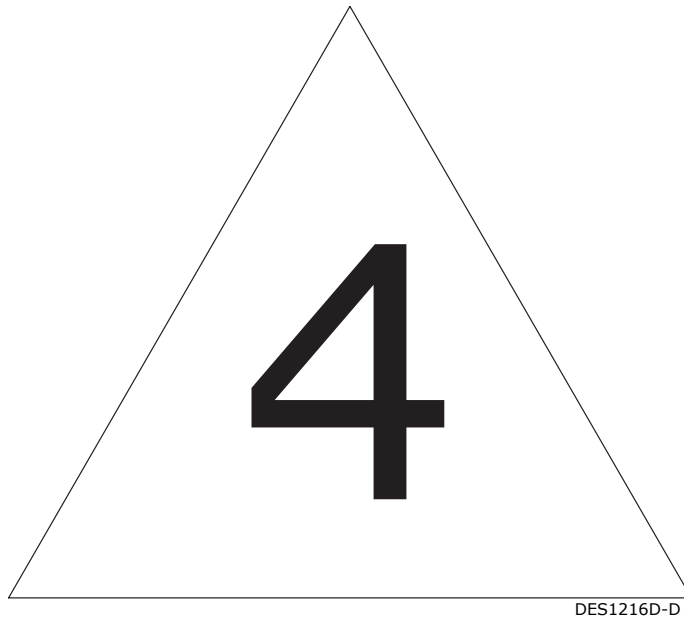




DES1216D-D



- Version ANGLE • CORNER version • Versión entre 2 paredes
 • Versione ANGOLO • HOEK uitvoering • ECKVERSION

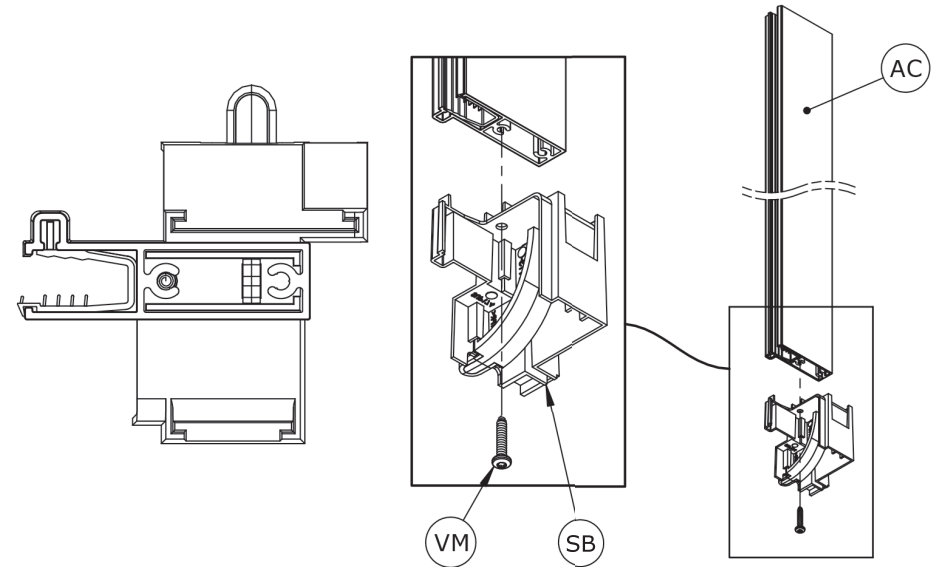


- Version NICHE • RECESS version • Versión entre 3 paredes
 • Versione NICCHIA • NIS uitvoering • NISCHENVERSION




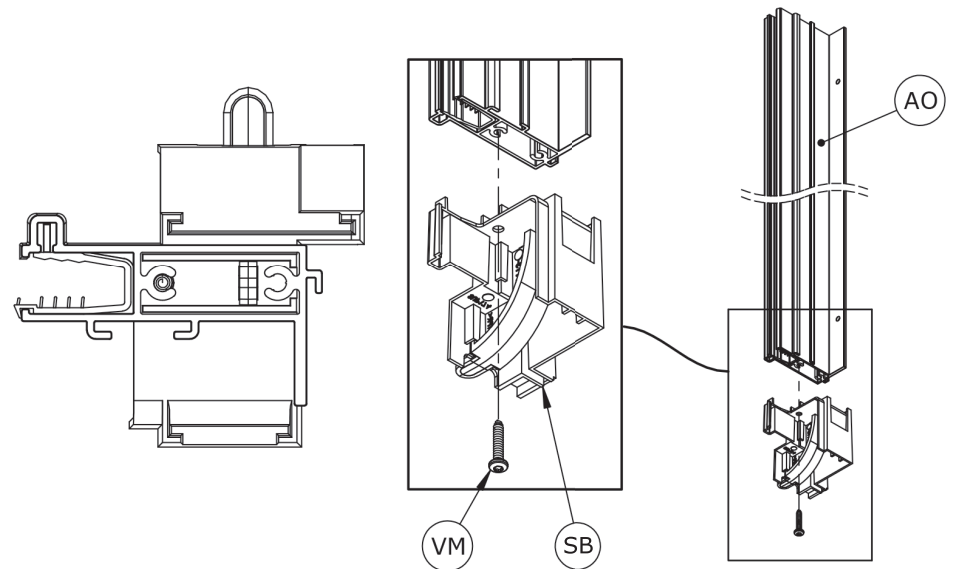


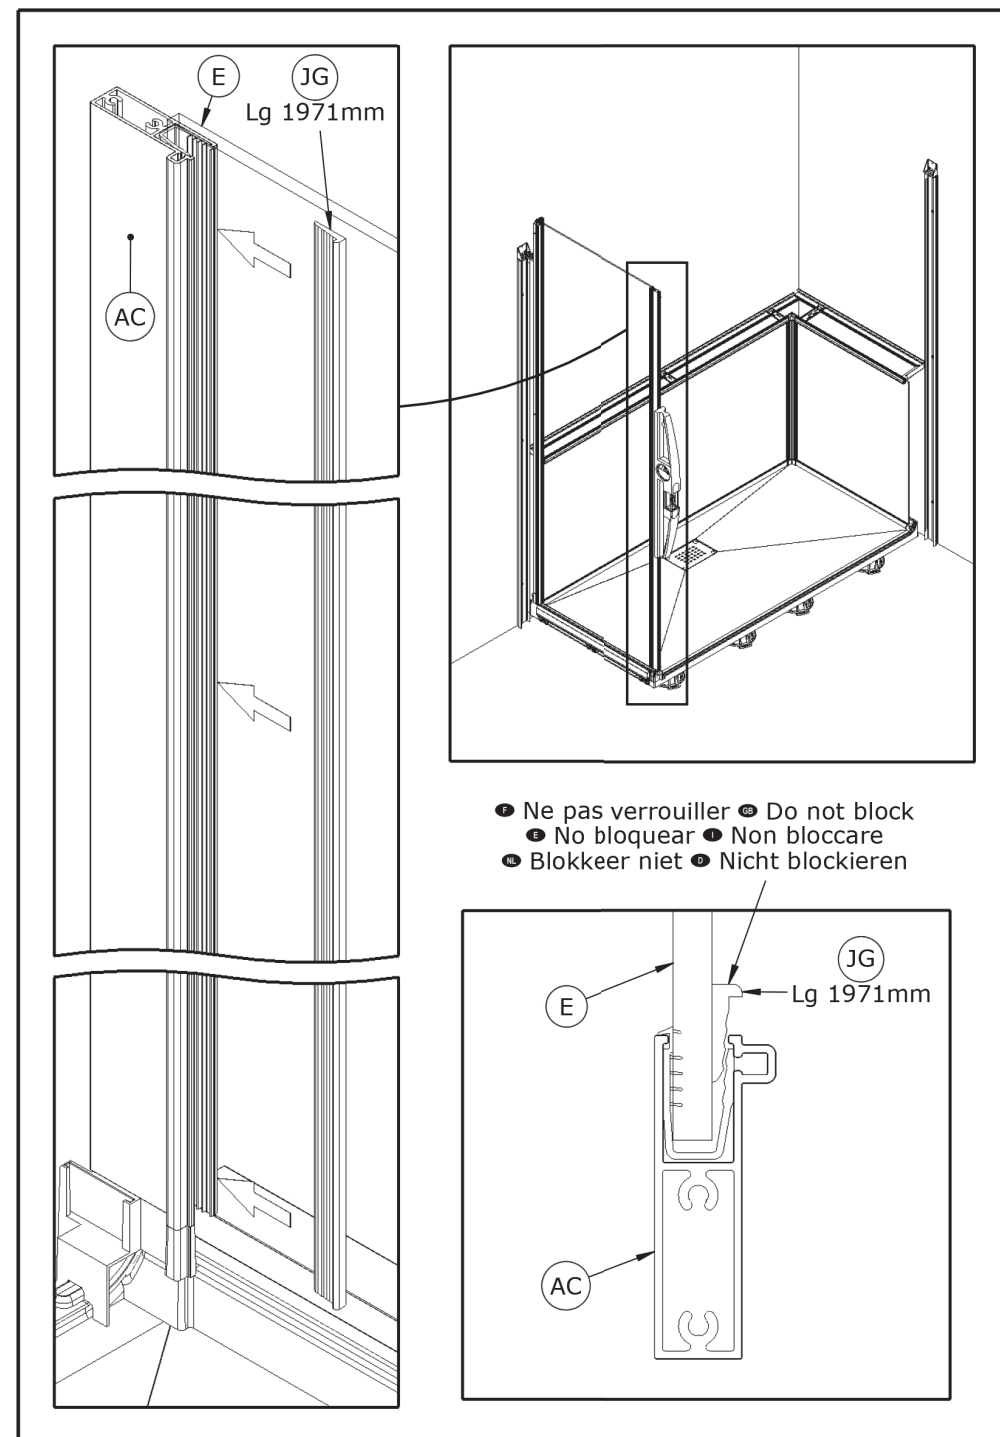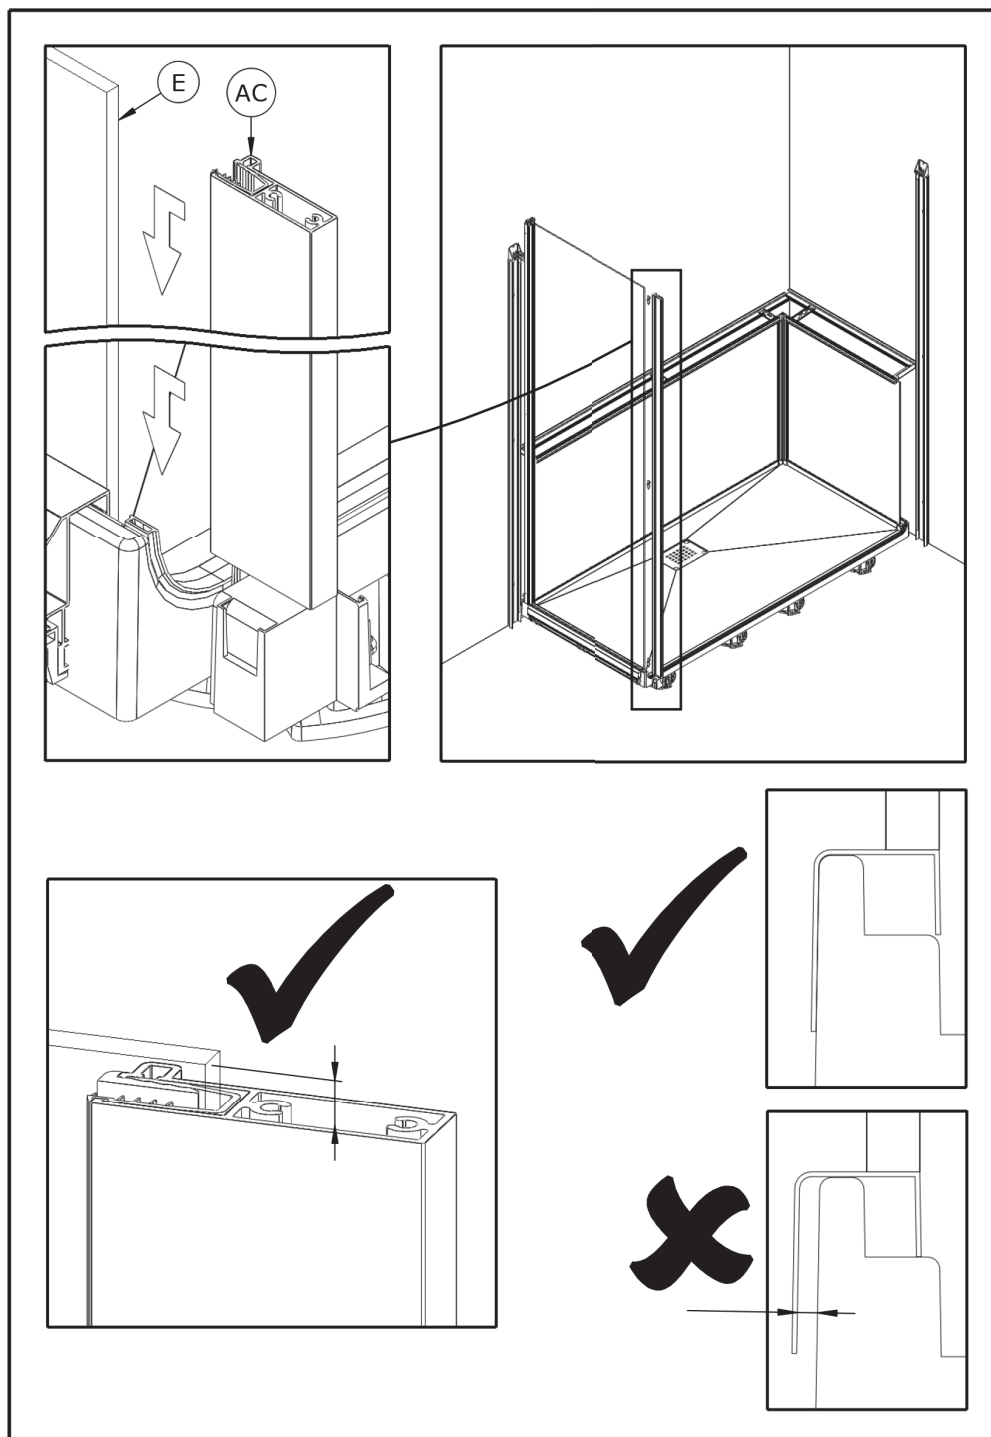

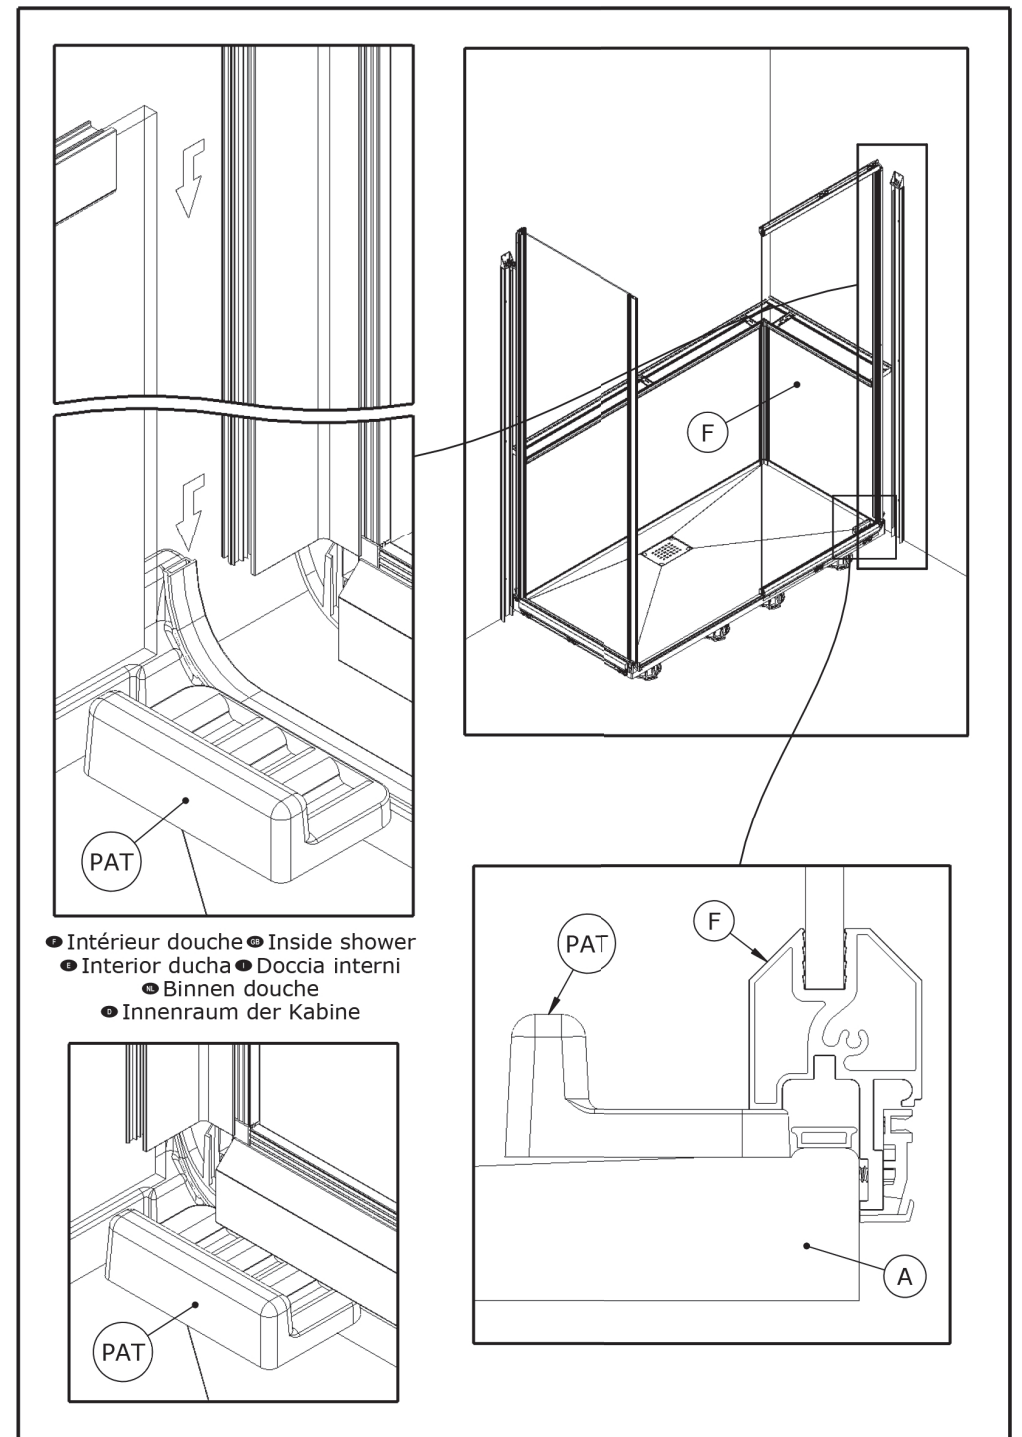
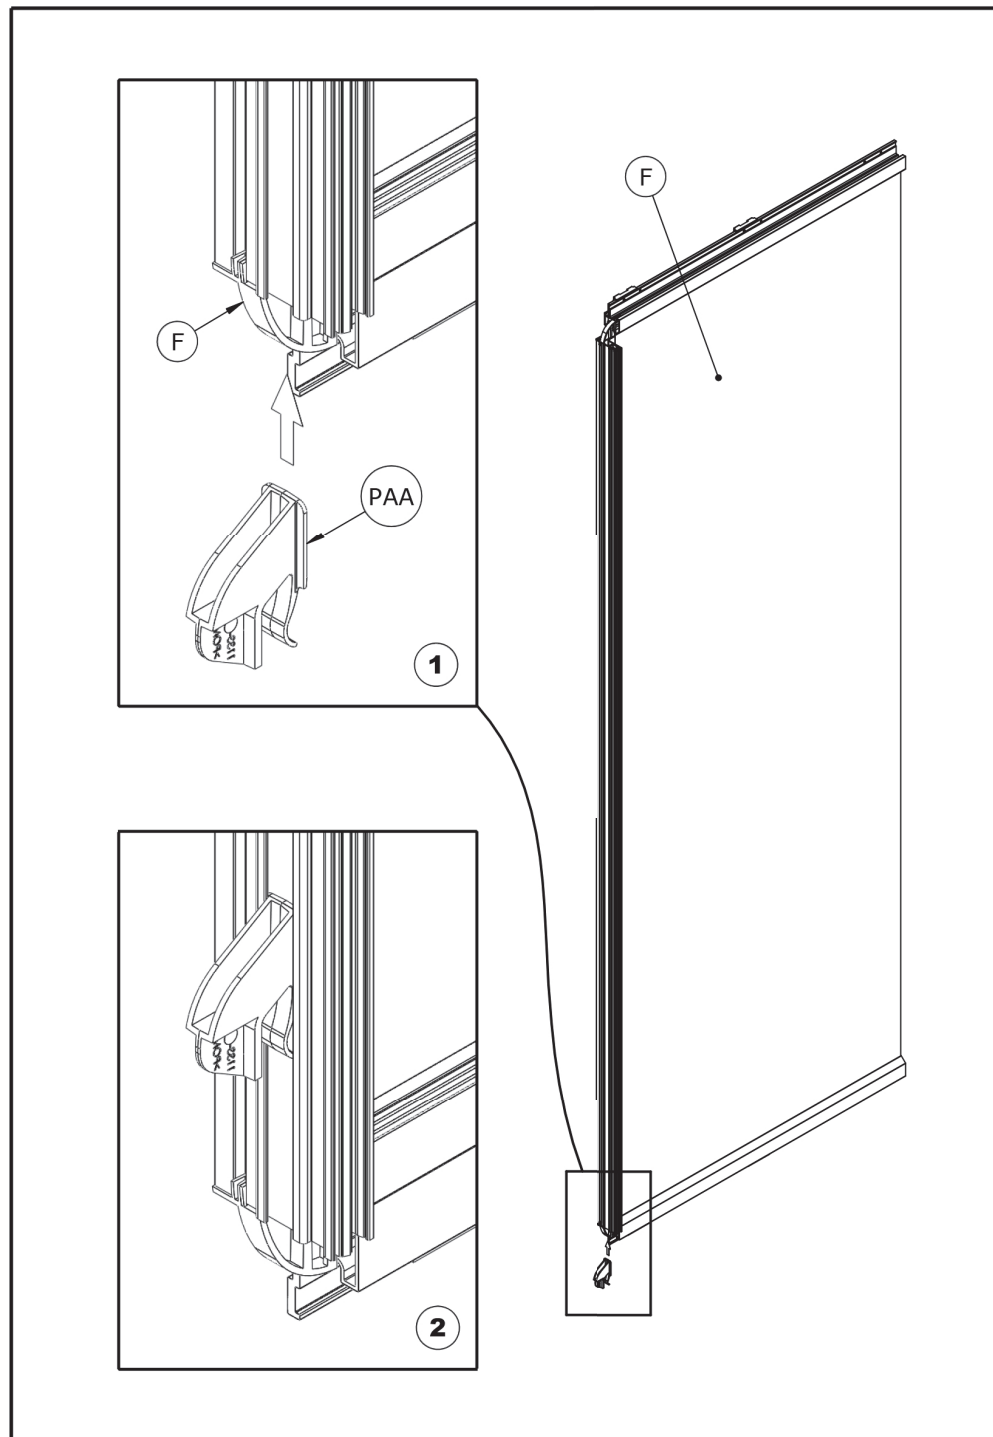


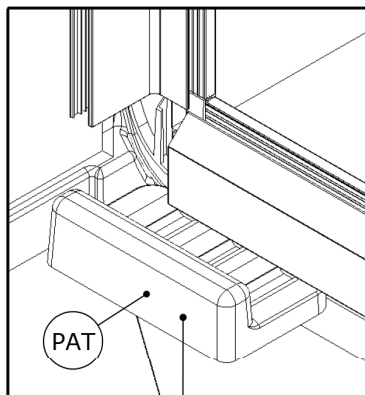


● Retirer ● Remove
 ● Quitar ● Togliere
 ● Verwijderen
 ● Entfernen

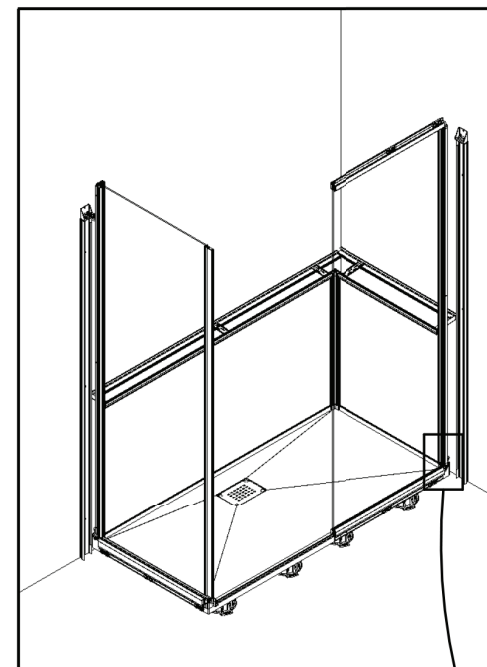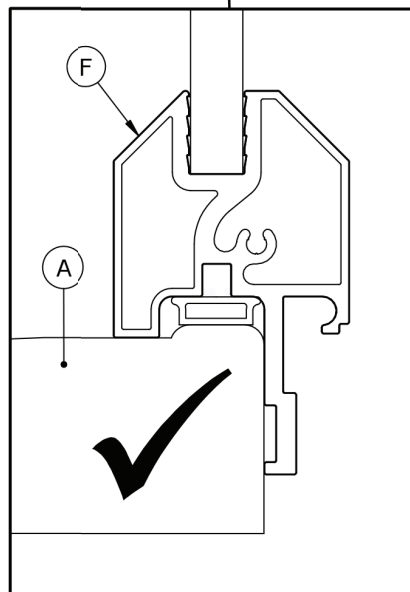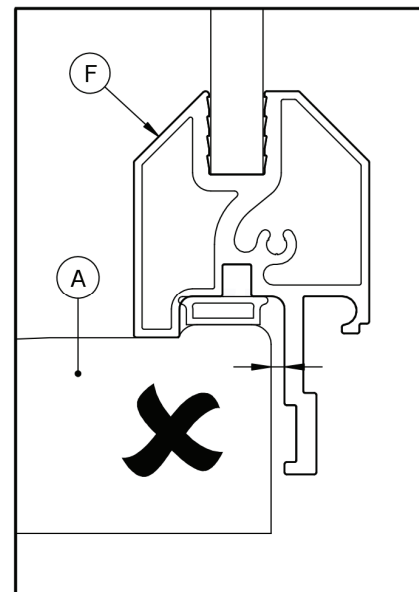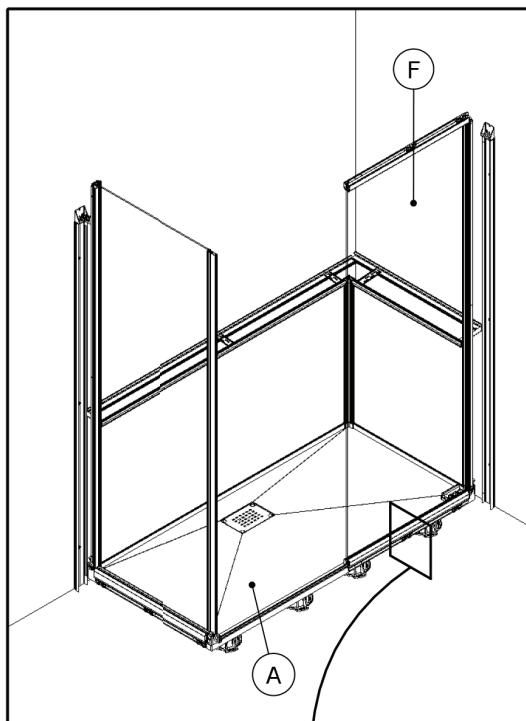






PAA

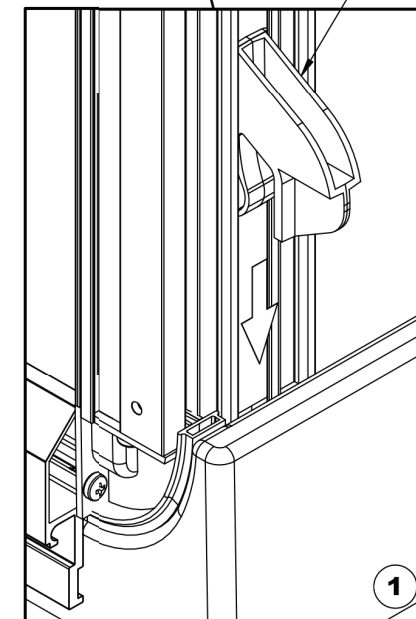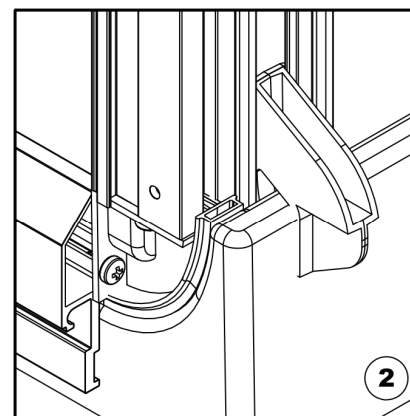






● Vue de derrière ● Back view
 ● Vista trasera ● Vista posteriore
 ● Zicht naar achteren ● Rückansicht

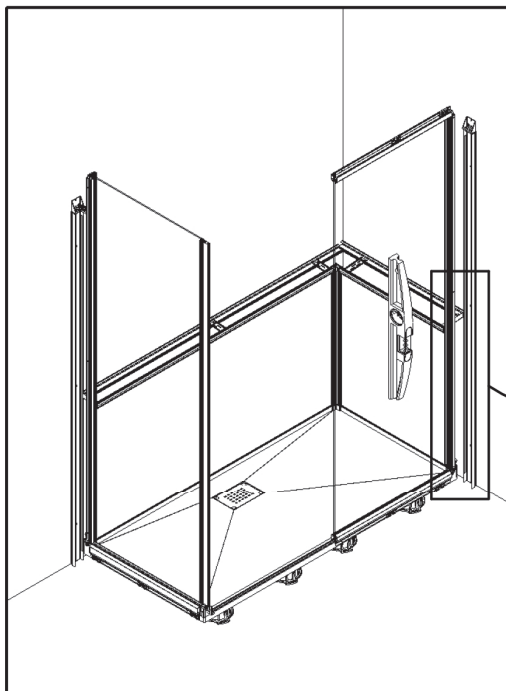


• Ne pas verrouiller • Do not block
 • No bloquear • Non bloccare
 • Blokkeer niet • Nicht blockieren

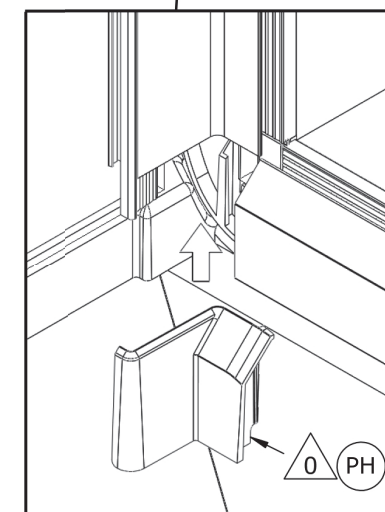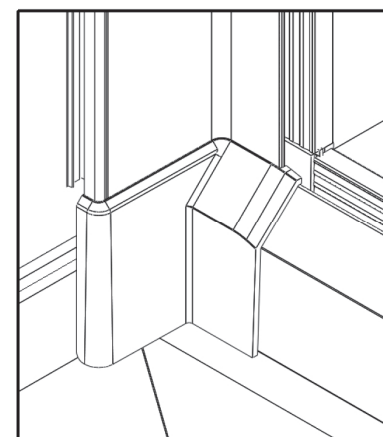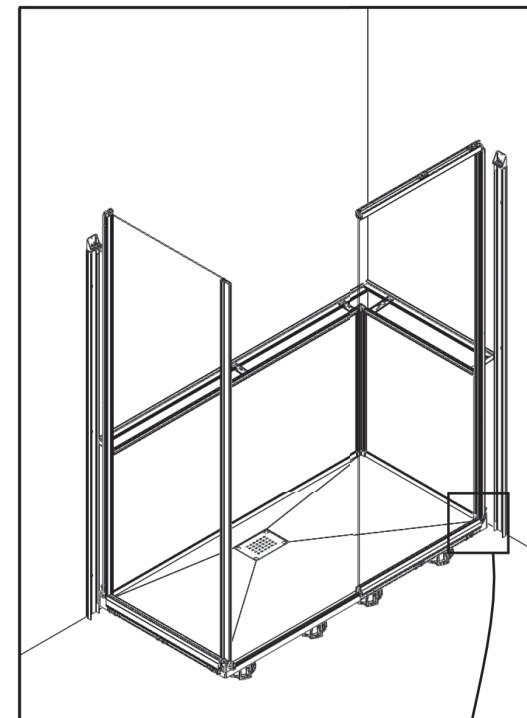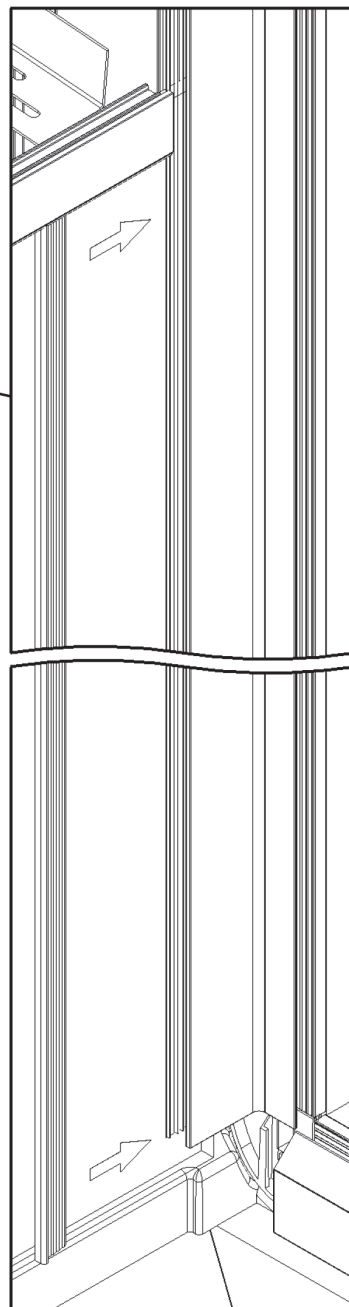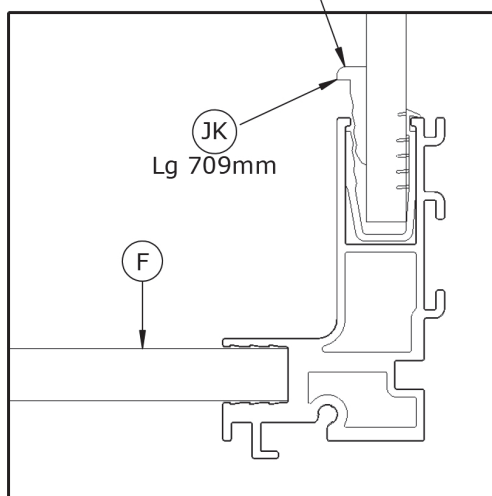


• Intérieur douche • Inside shower
 • Interior ducha • Doccia interni
 • Binnen douche • Innenraum der Kabine

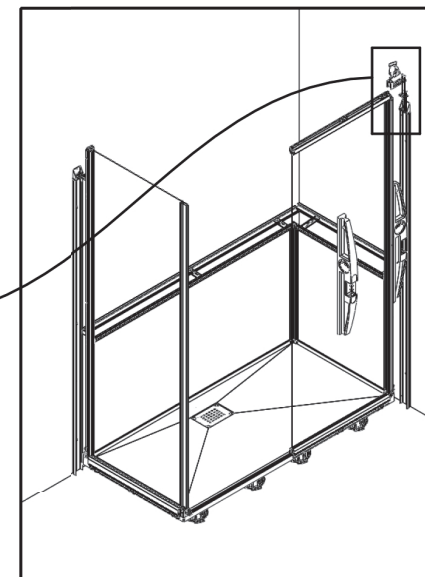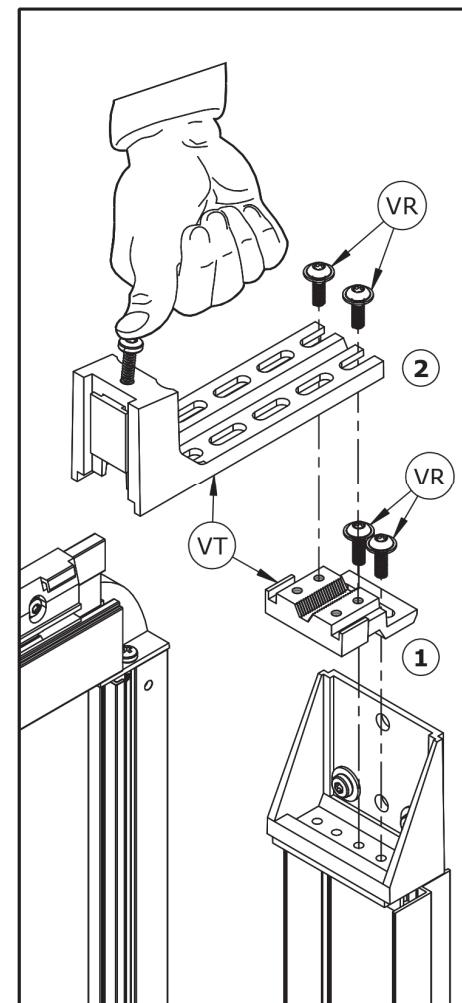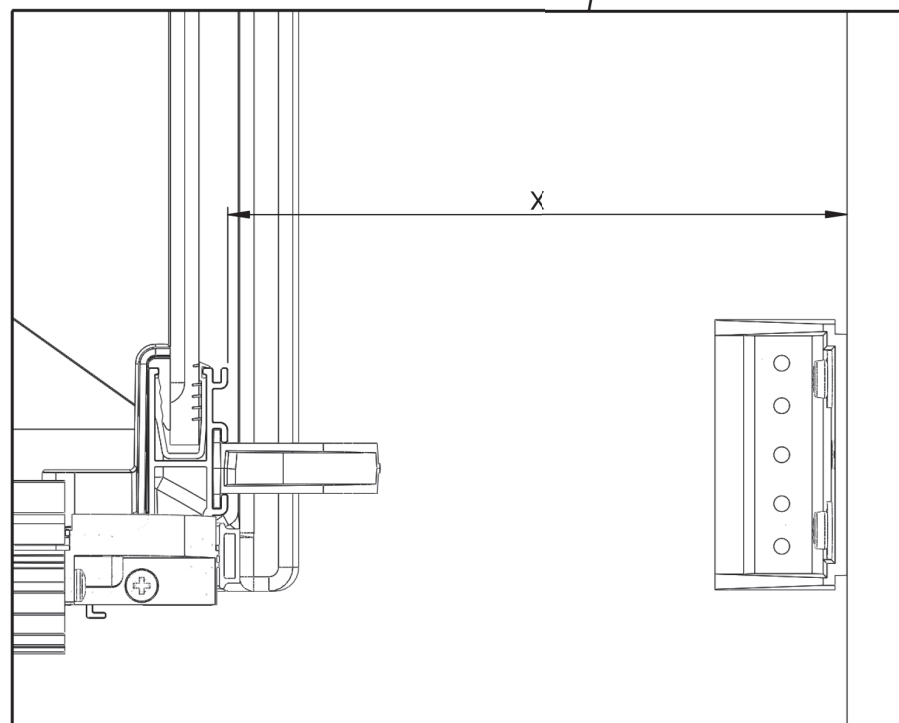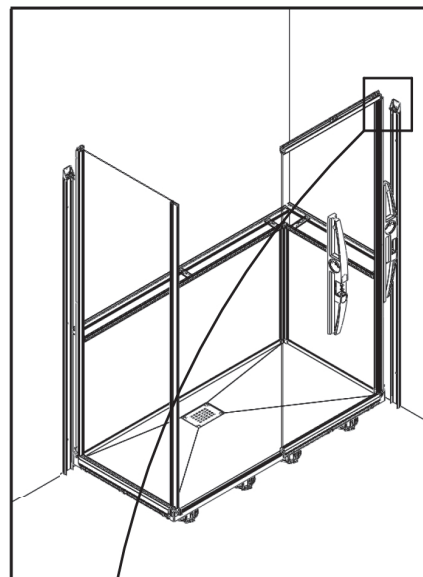
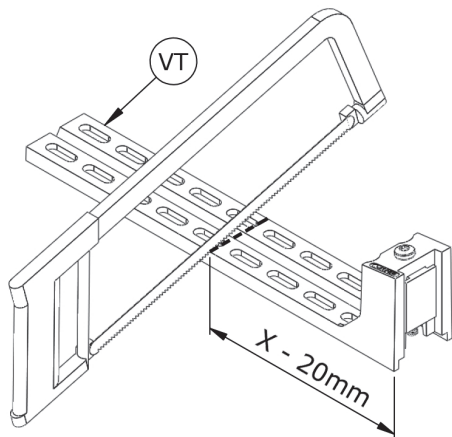



● Serrer ● Tighten ● Apriete
● Serrare ● Festziehen ● Aandraaien

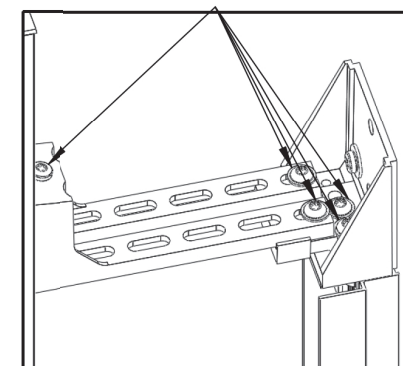







● Vue de dessus
● Top view
● Vista superior
● Vista dall'alto
● Bovenanzicht
● Ansicht von oben

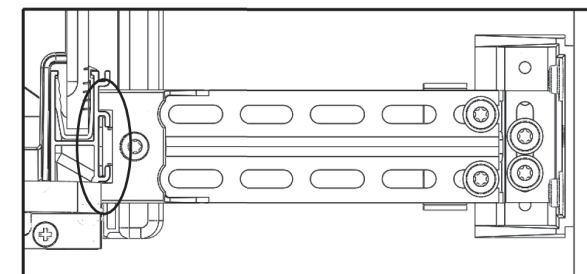


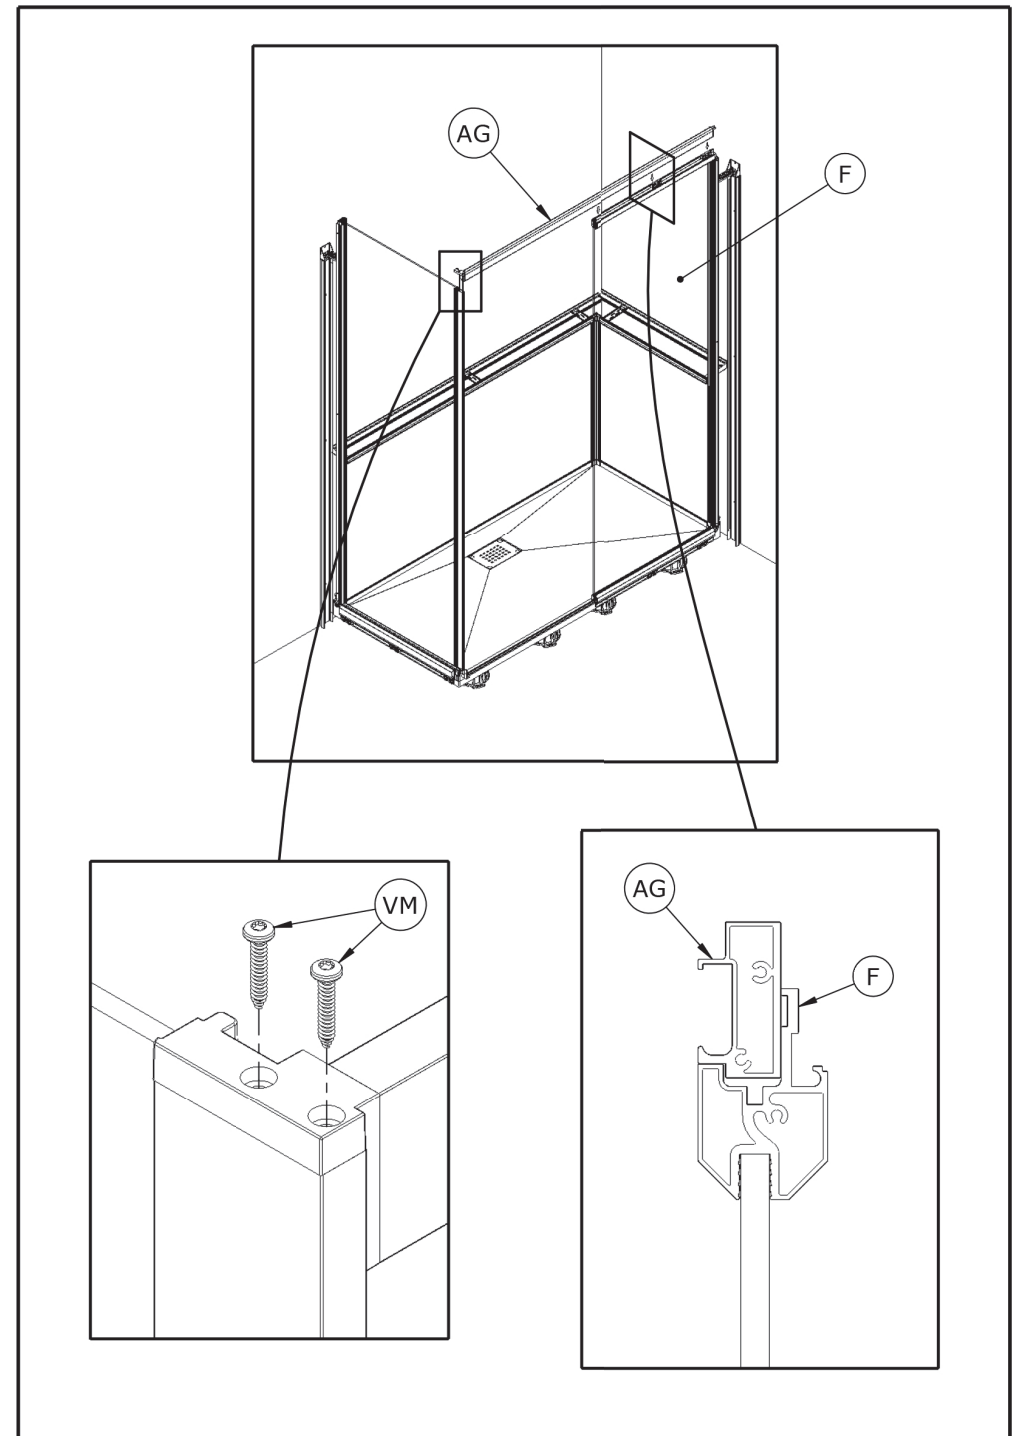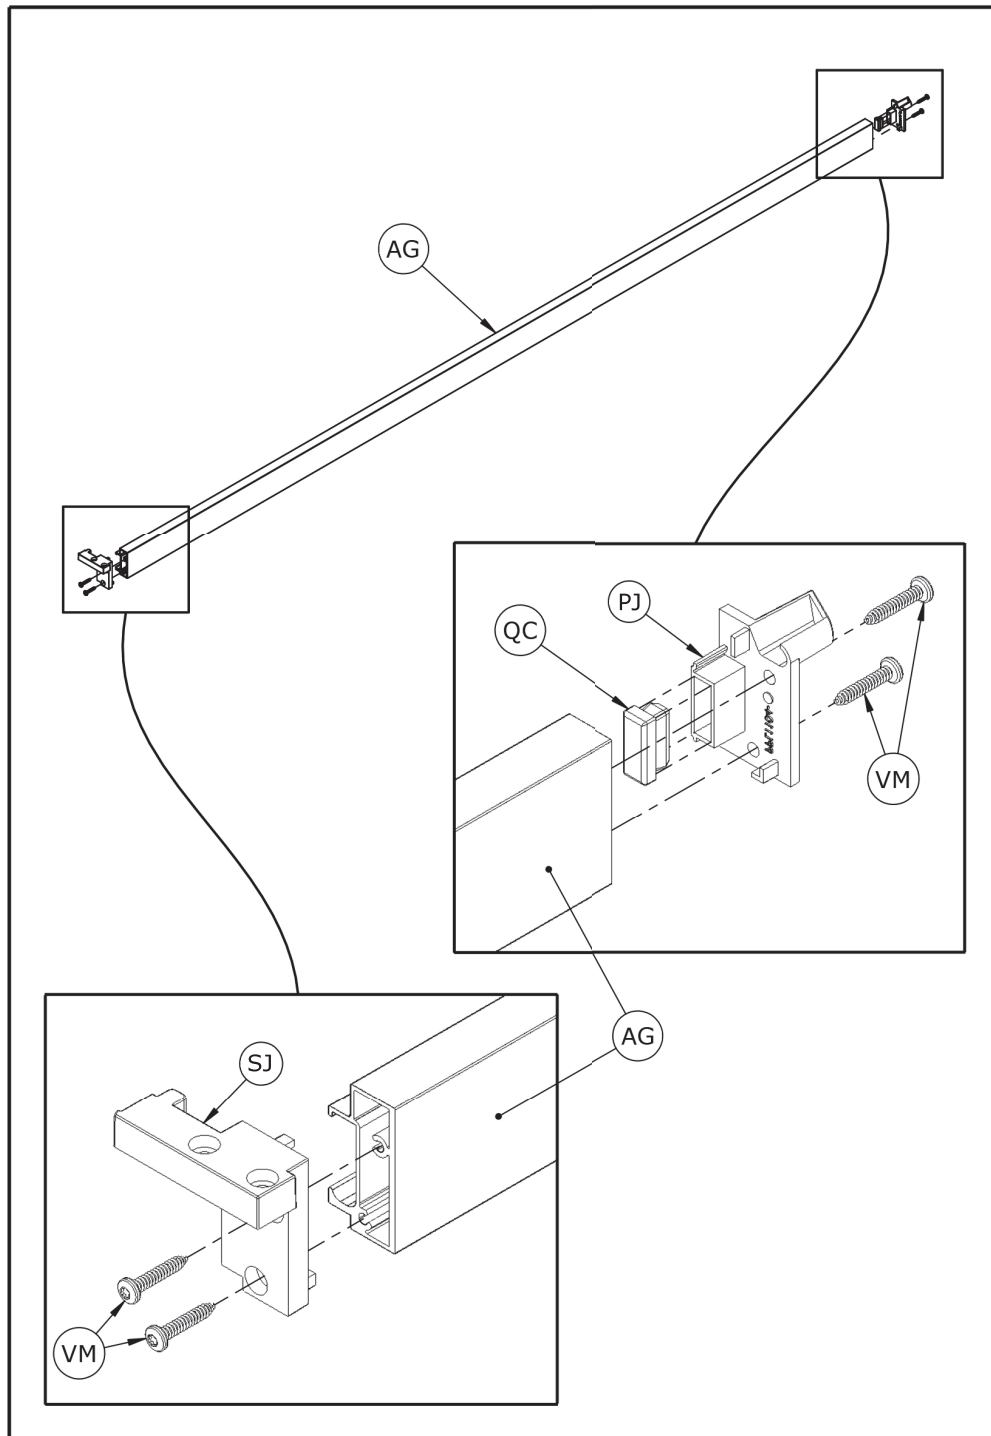



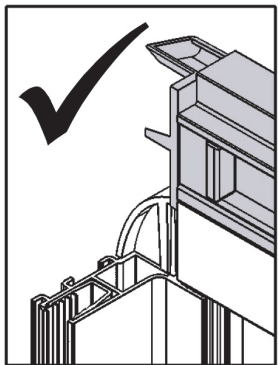


- Intérieur douche • Inside shower
- Interior ducha • Doccia interni
- Binnen douche
- Innenraum der Kabine

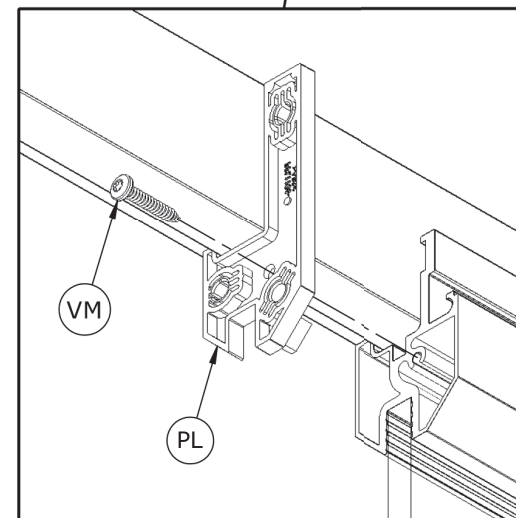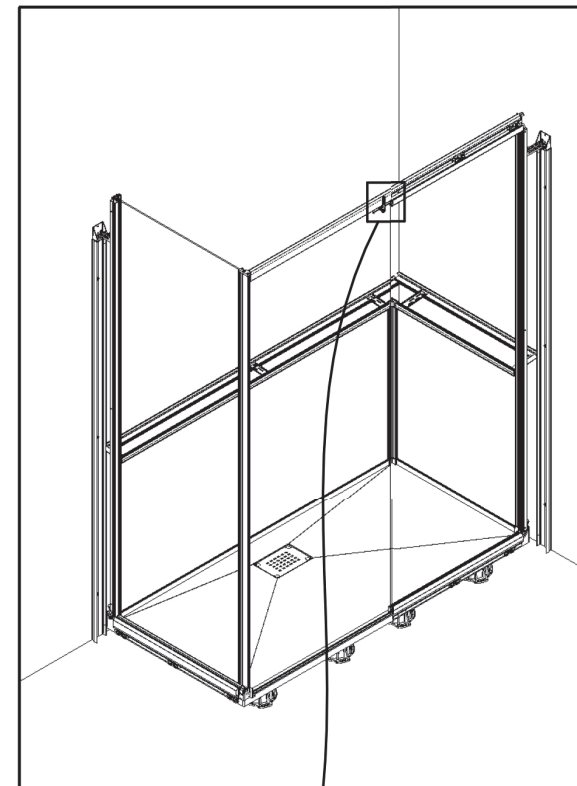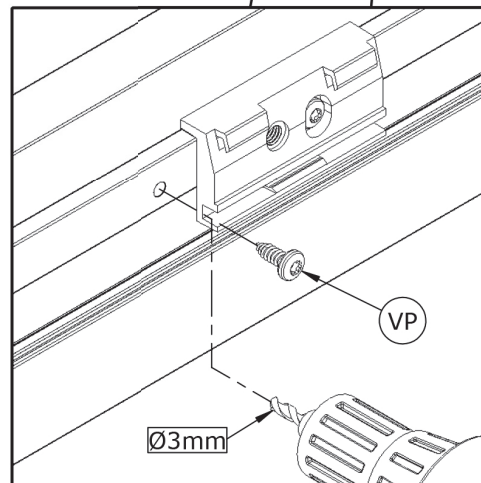
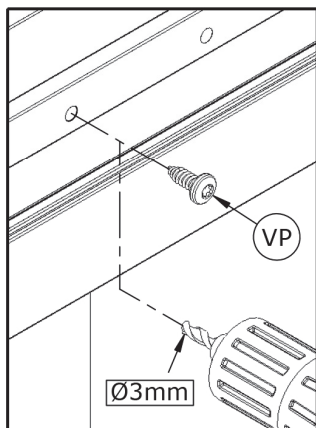
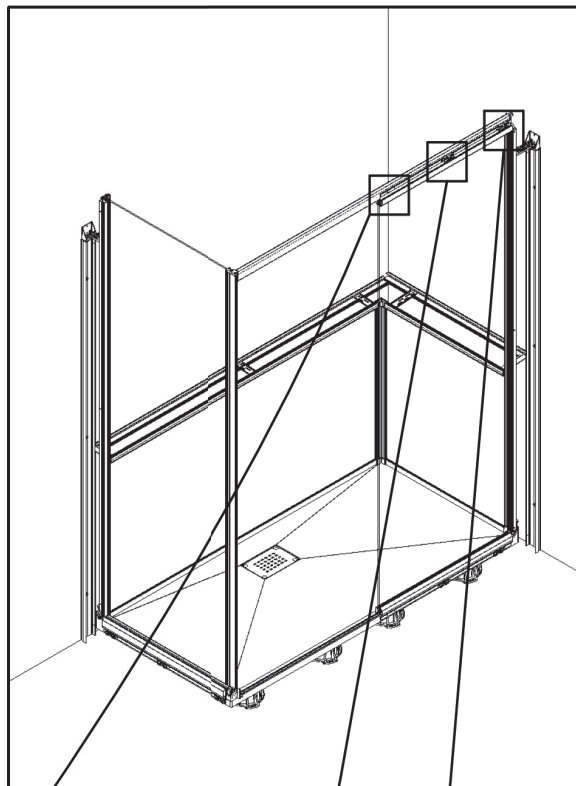
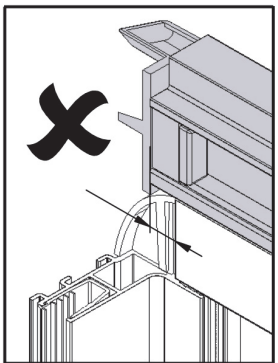


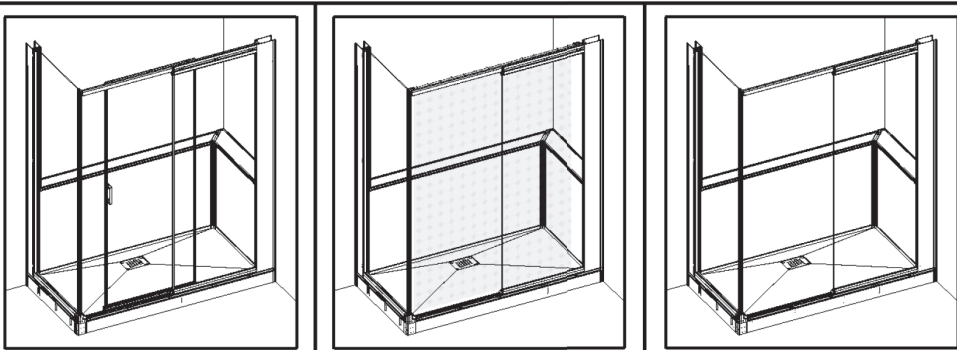




- ↓ ↓
 • Page suivante
 • Next page
 • Página siguiente
 • Pagina seguente
 • Volgende bladzijde
 • Nächste Seite

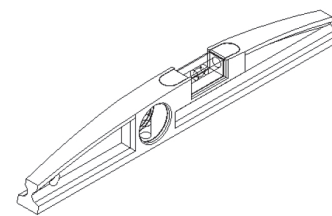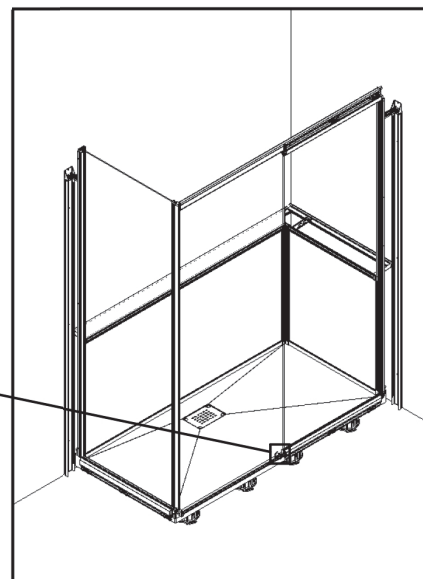
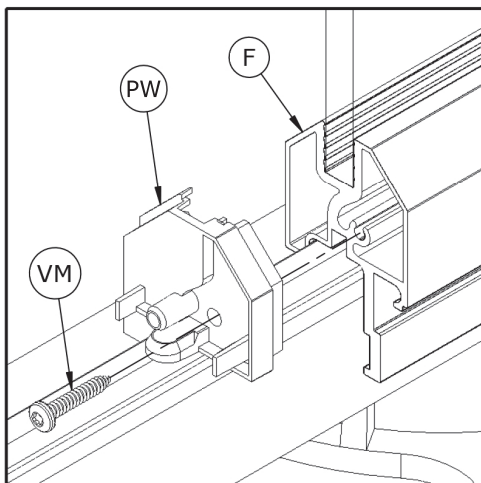




- Vérifier l'aplomb de la cabine, puis verrouiller
 • Ensure level then block
 • Verificar la verticalidad de la cabina, y bloquear
 • Assicurarsi che la doccia è di livello, e bloccare
 • Controleer of de douchecabine goed recht staat, en blokkeer
 • Prüfen, ob die Kabine lotrecht steht, anschließend blockieren

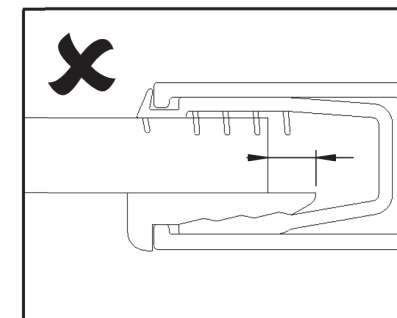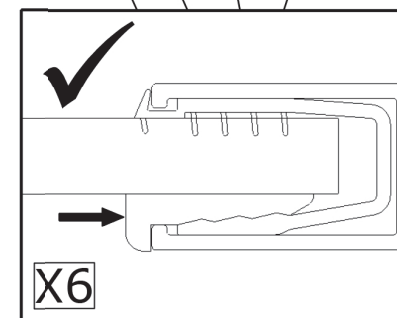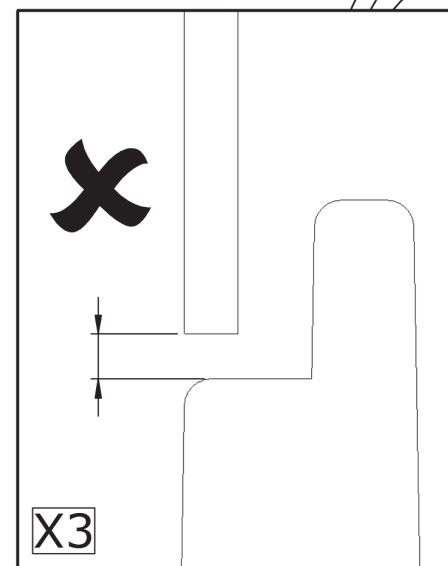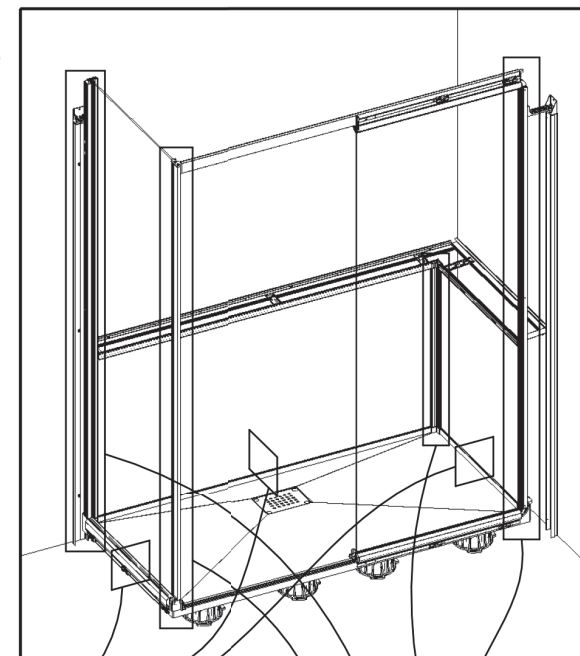


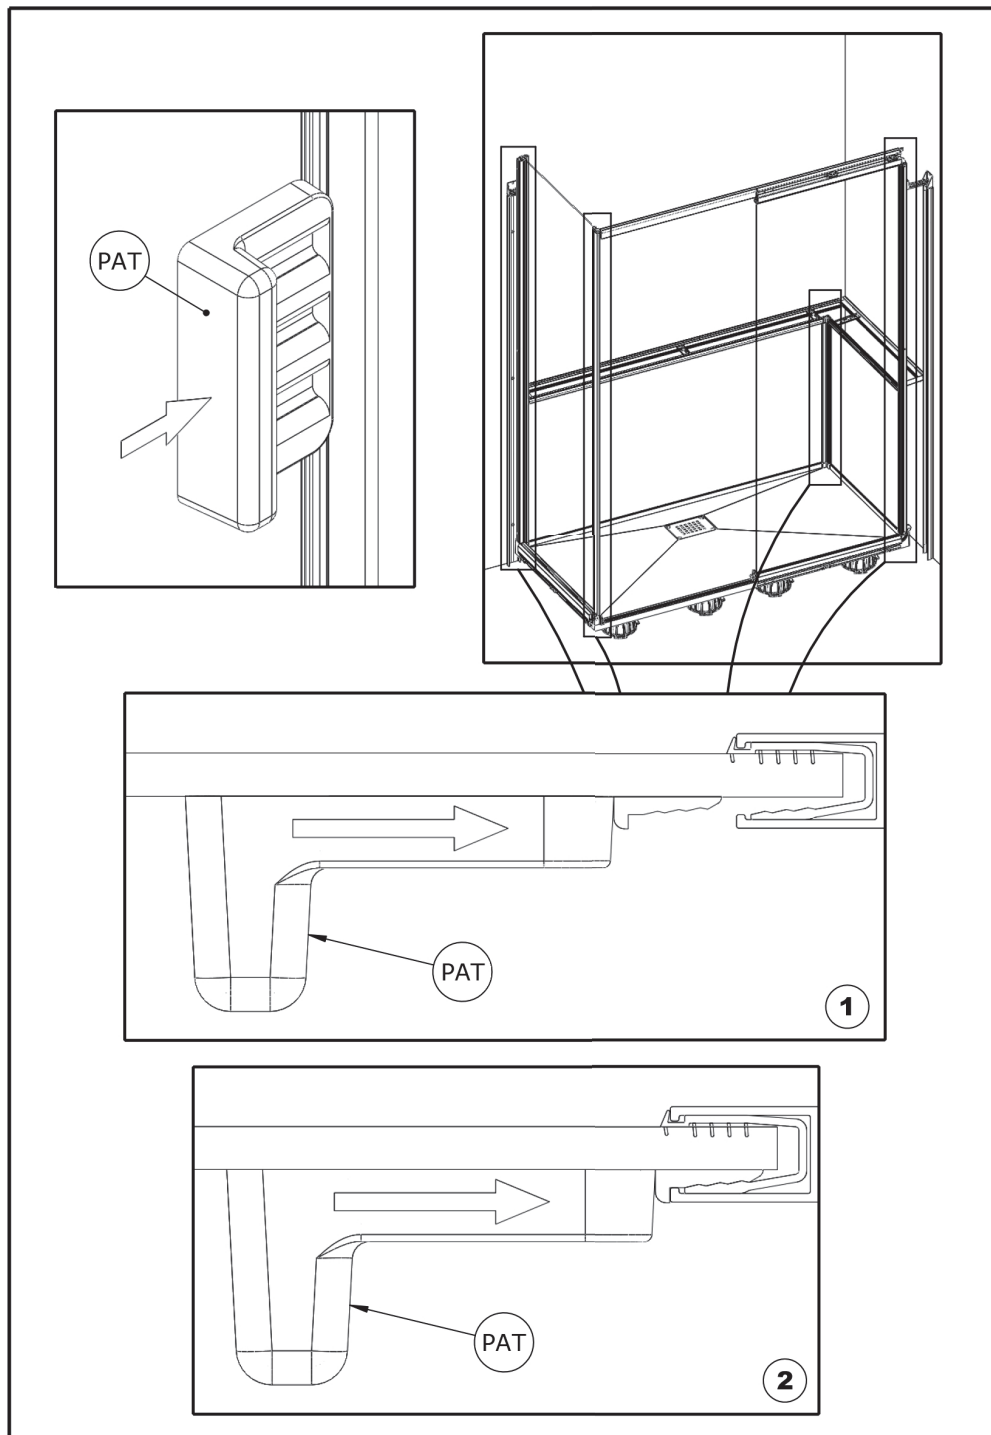


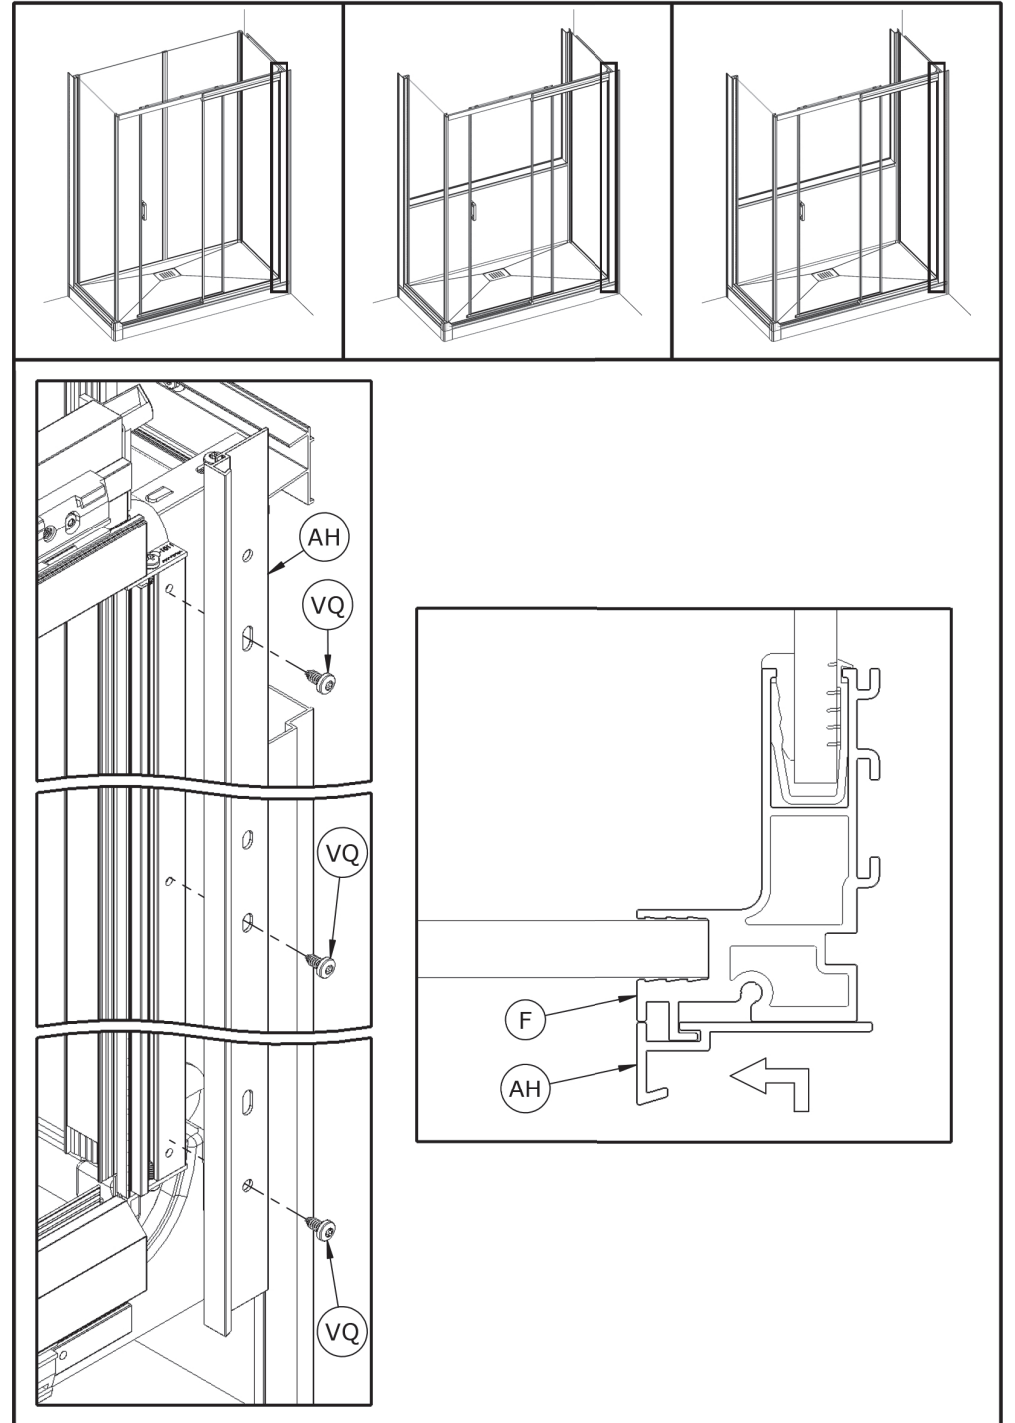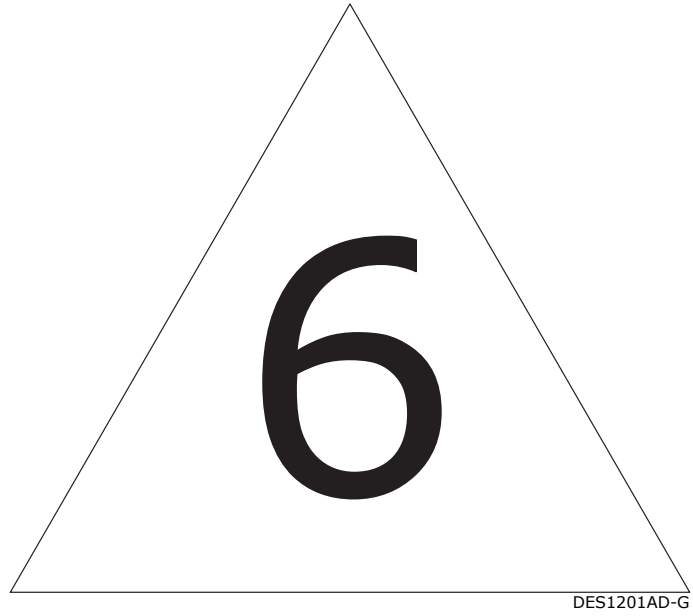




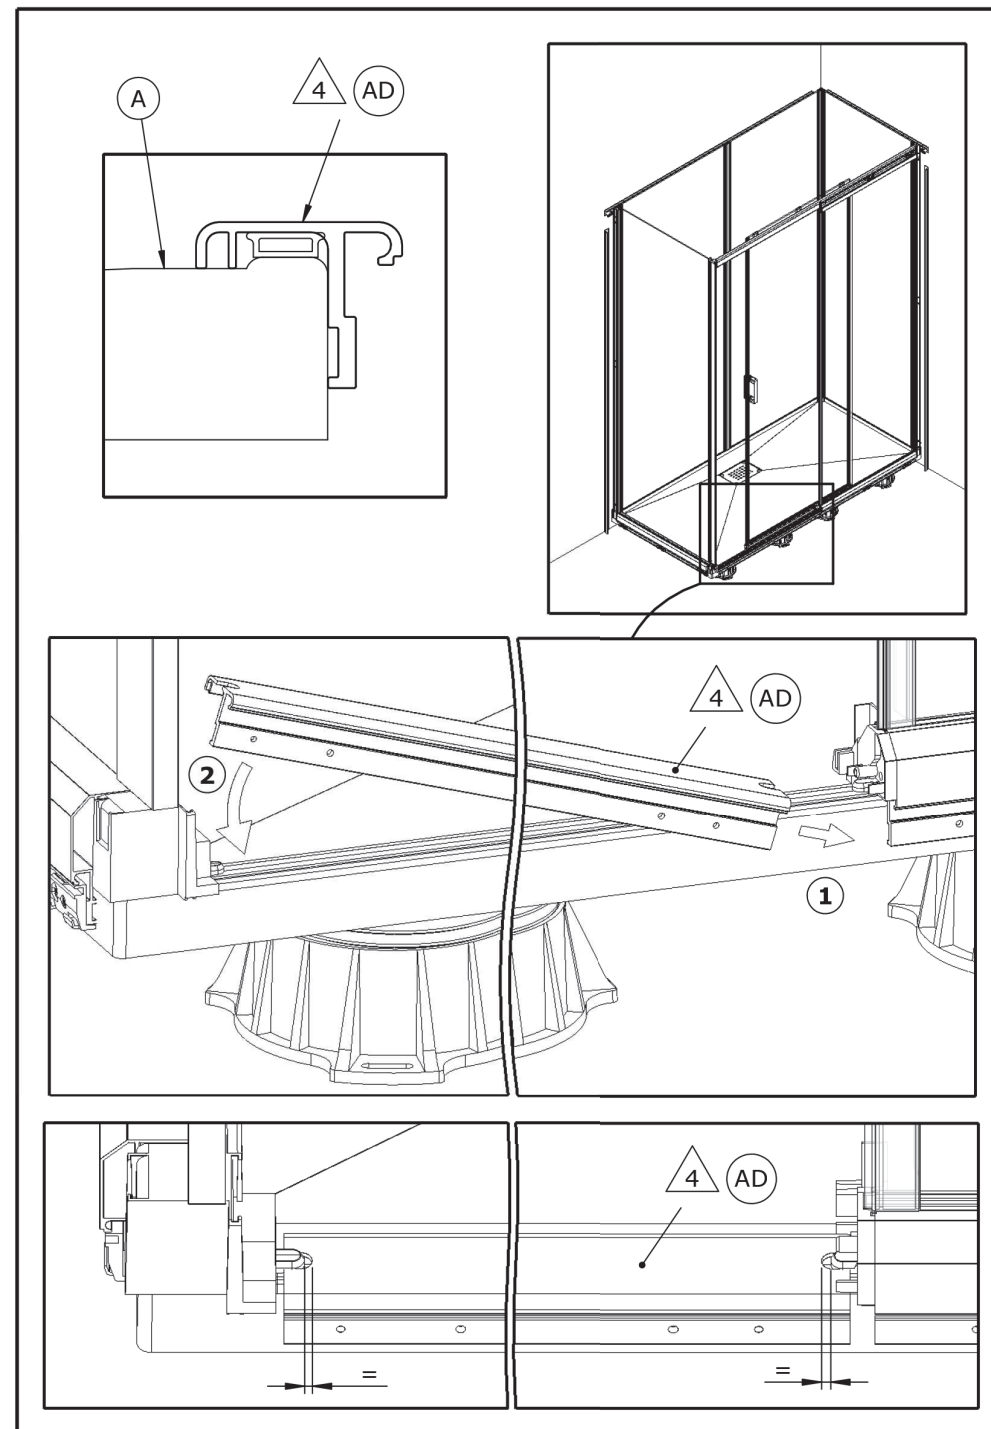
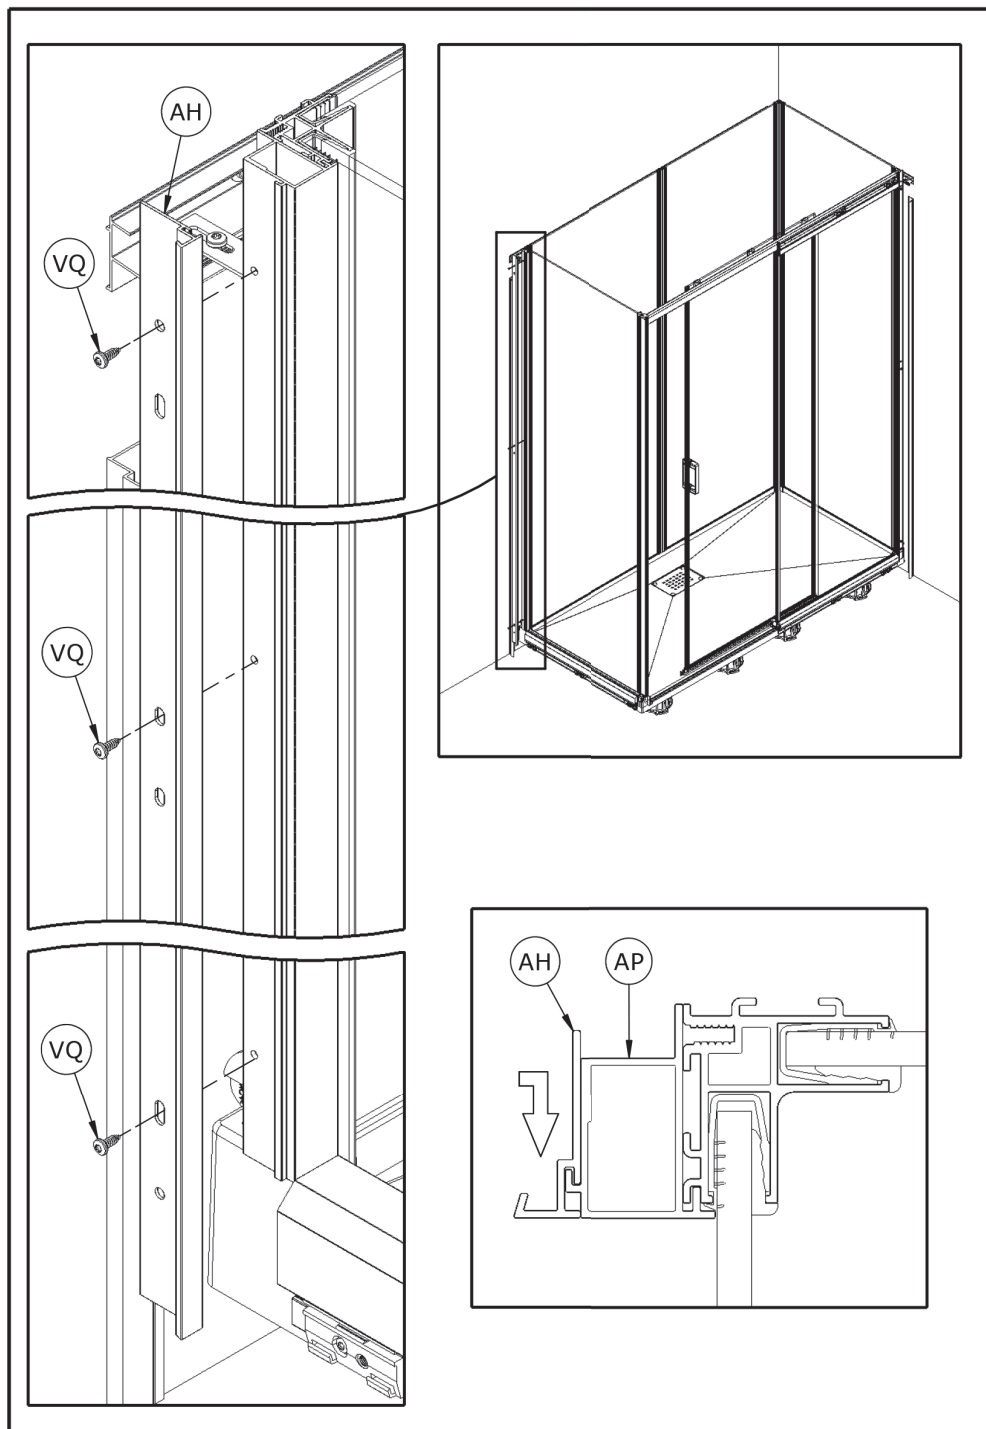






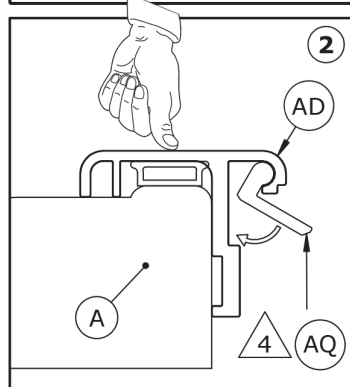
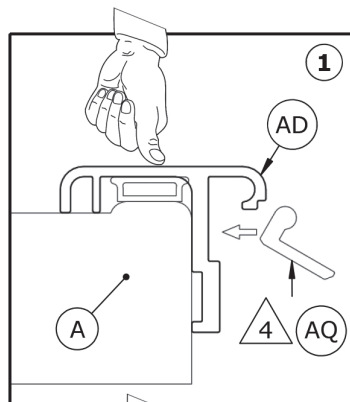







- Vue de face
- Front view
- Vista frontal
- Vista frontale
- Vorderansicht
- Vooraanzicht


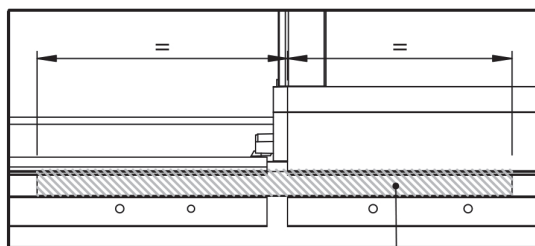
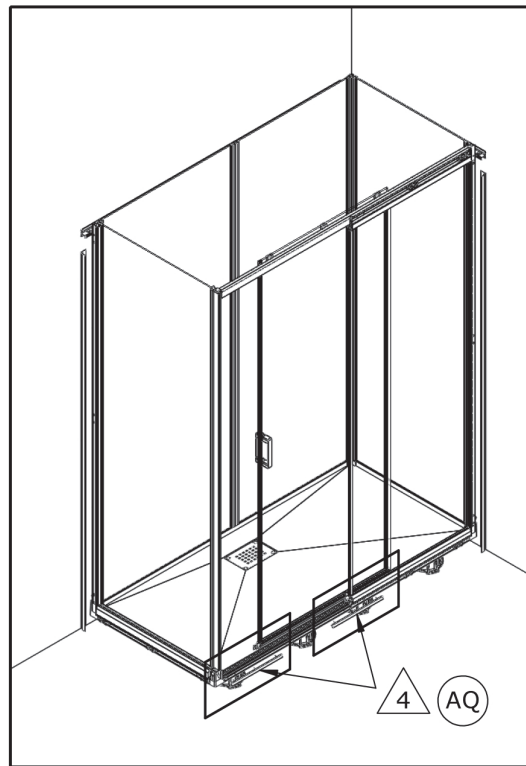


4 AQ

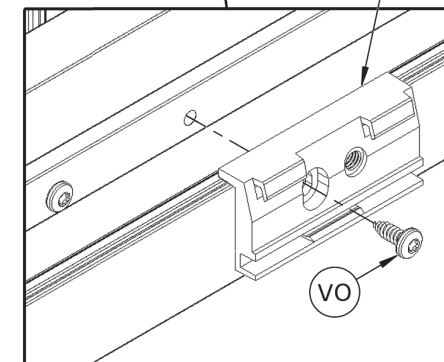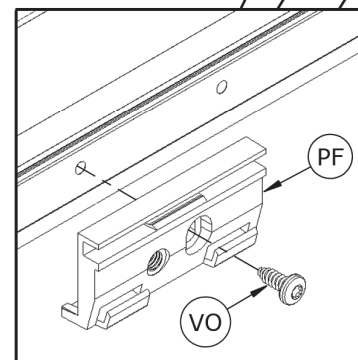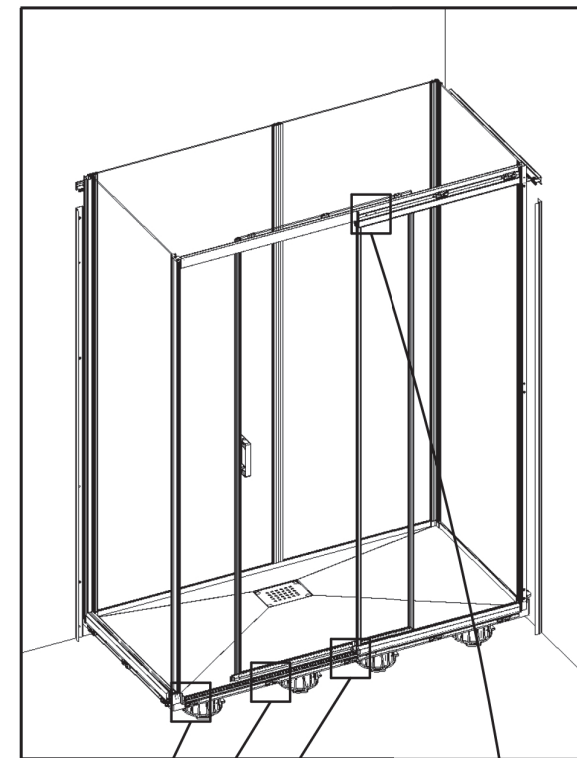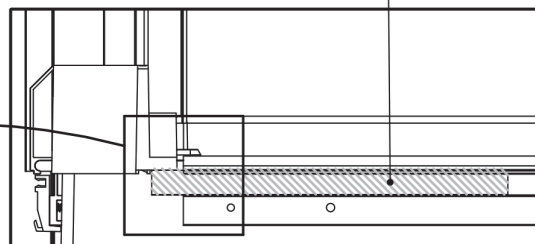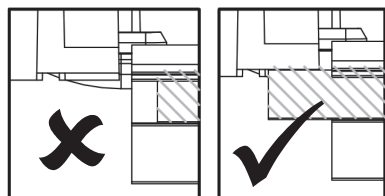


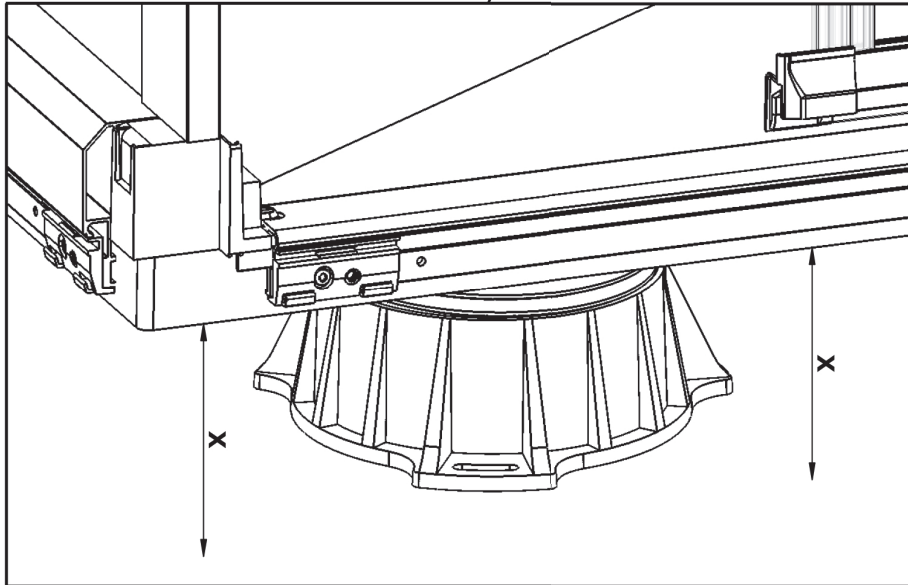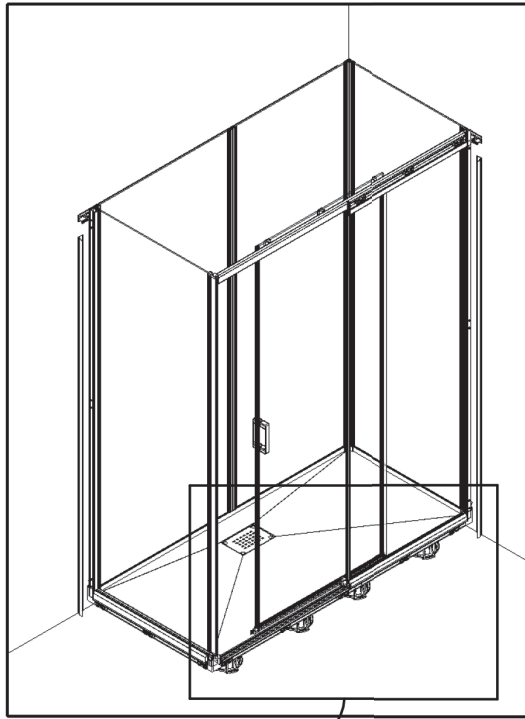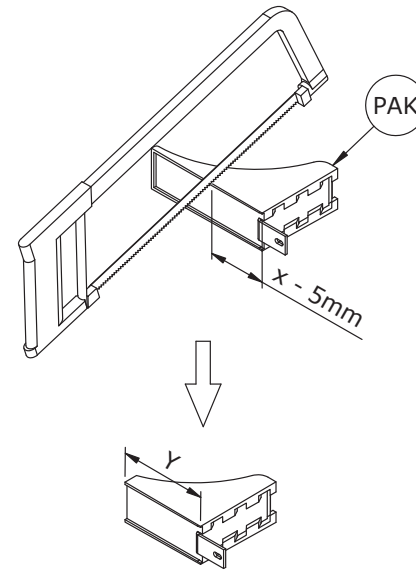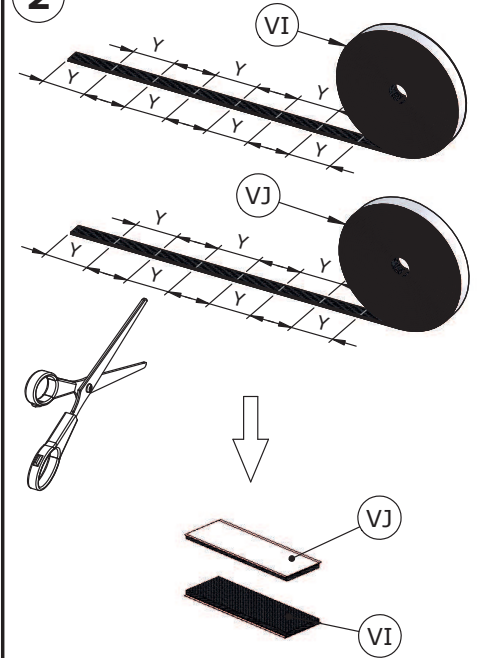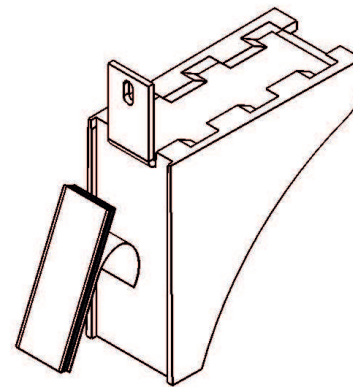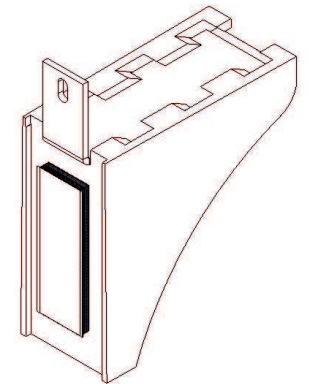**1****2****3****4**

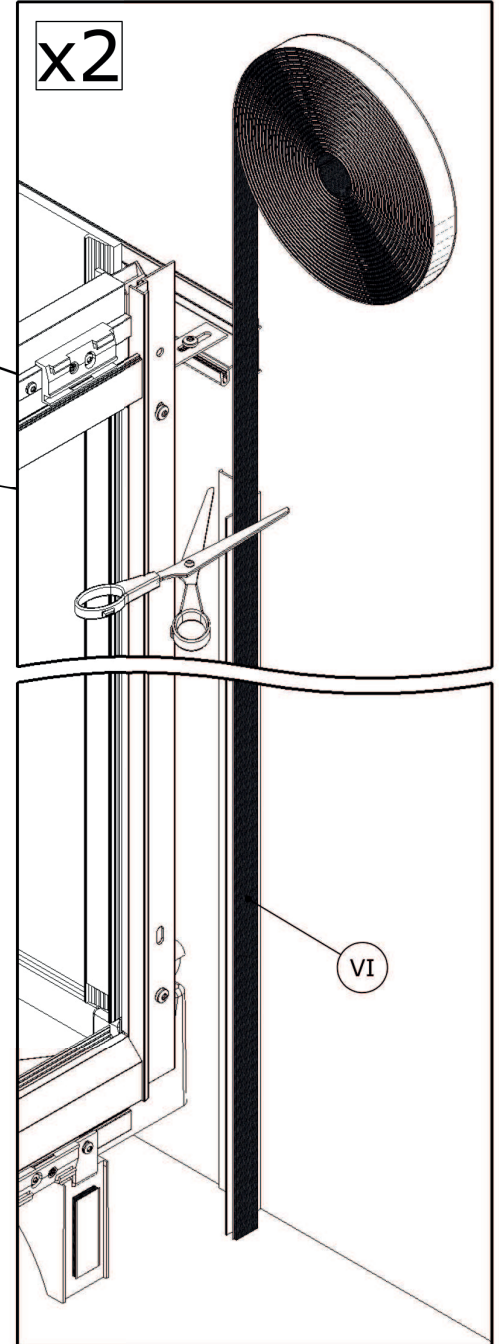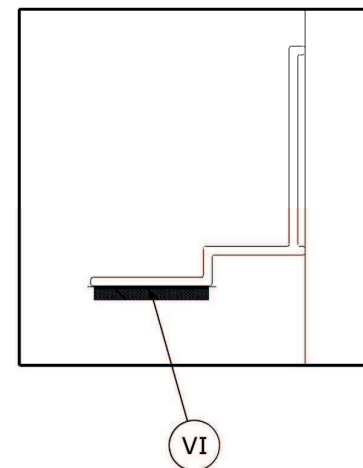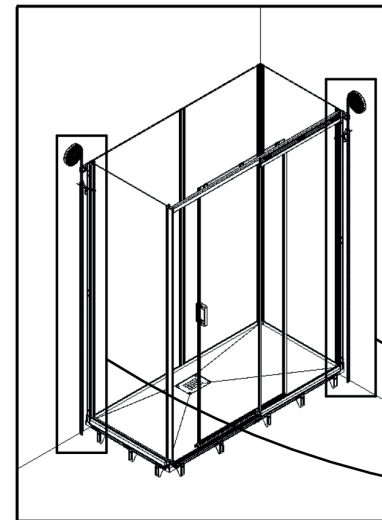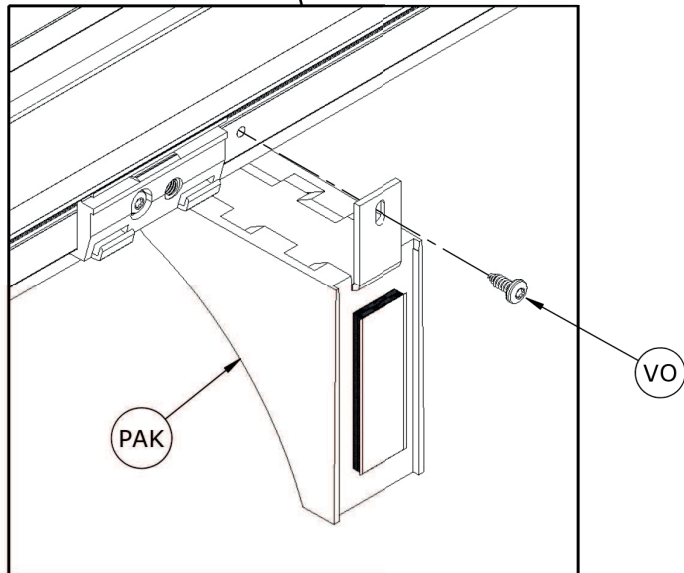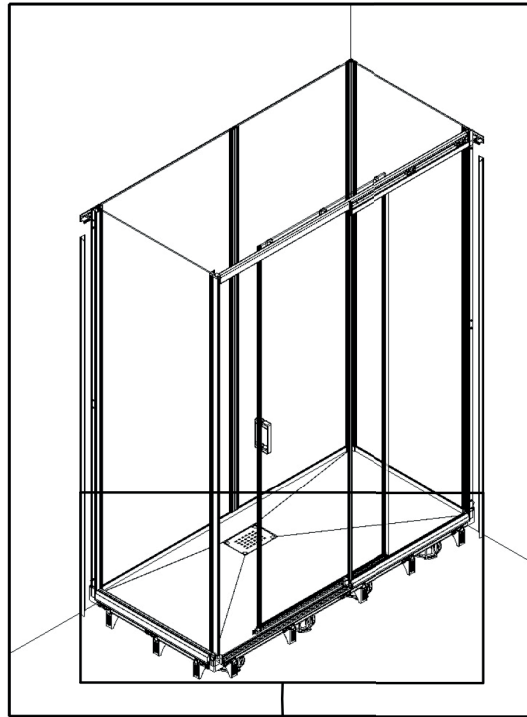

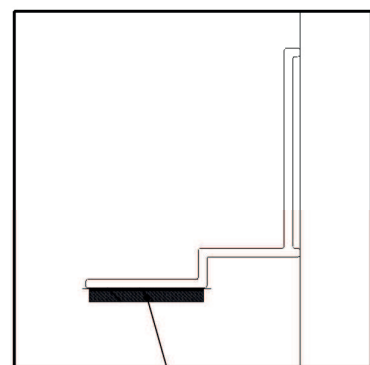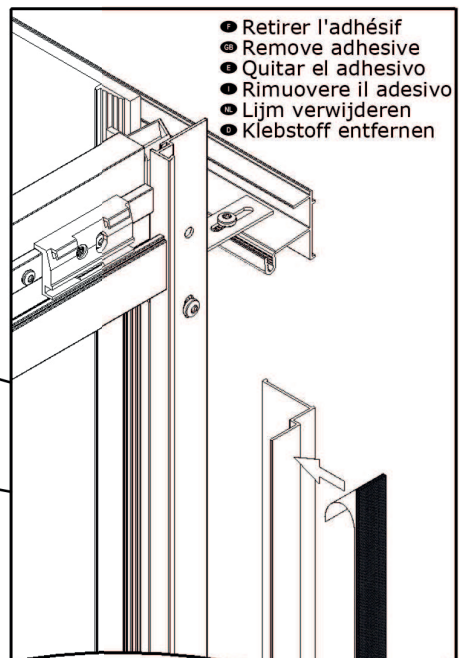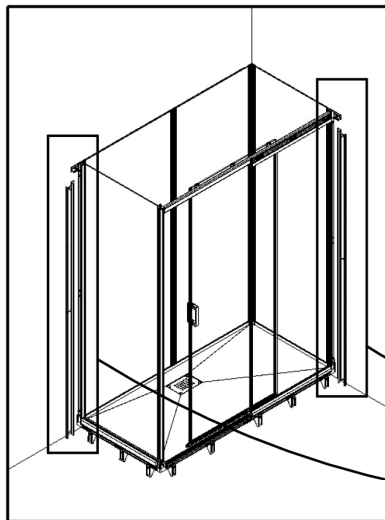

VI

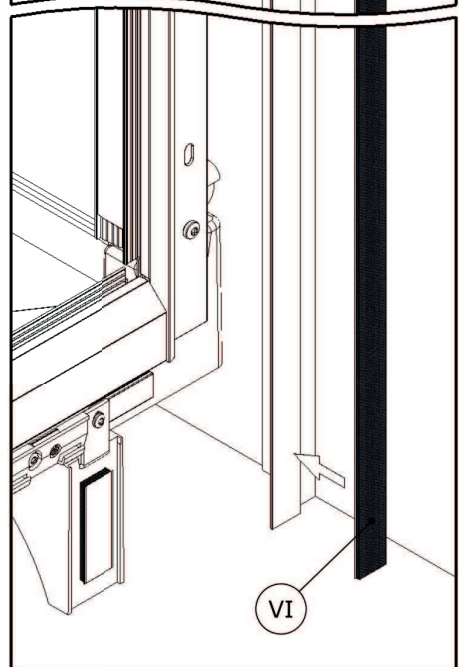

VI

