

INSTRUCTIONS. Ref. : F97109639

Preparation:

Before you start installing the spikes, we recommend cleaning the wheels to ensure the best possible adhesion of the super glue. (Super glue not included)

Take the included 5mm drill and set the drilling depth to 15 to 20 mm. Alternatively, you can use adhesive tape to mark the drilling depth (see illustration). This ensures that the drilling depth is identical for all holes.



Assembly:


Depending on the traction profile on the wheel surface, the spikes can be offset (optimal traction). With this method you work with two imaginary lines along which you place the spikes (see picture). Drill the holes along the entire surface of the wheel. Alternating left and right, on lines 1 and 2. In the picture (below) you can see that we drilled the spikes opposite each horizontal traction profile to achieve optimal distribution of the spikes over the entire wheel surface.



Safety precautions:

Apply in a well-ventilated place. Wear gloves and wash your hands after use.

Before screwing in the spikes, apply the super glue to the threads of the spikes and into the drill holes. Make sure you do not come into direct contact with the super glue. Wear appropriate gloves for your personal protection. Then screw the spikes into the drill holes using the screwdriver provided.

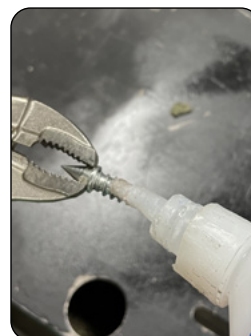

Check:

Check the robotic lawnmower's wheels regularly to ensure that no spikes have come loose and to ensure the best possible traction. To replace loose or lost spikes, this RoboSpike set contains enough spare spikes.

